



CableMatic Plus
User Guide
For Electrical Designer

June 9, 2014

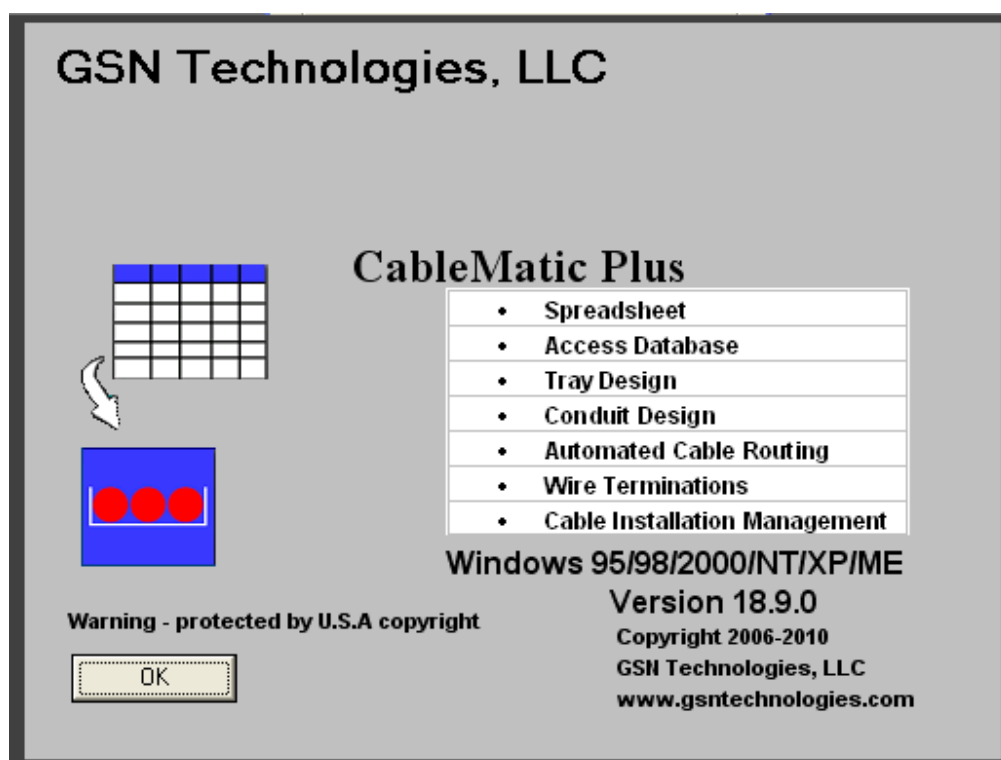


TABLE OF CONTENTS

- 1.0 [Abstract](#)
- 2.0 [Operational Overview](#)
 - 2.1 [Catalogs and Rules](#)
 - 2.2 [Cable Data](#)
 - 2.2 [Raceway Matrix](#)
 - 2.3 [Cable Routing Rules](#)
 - 2.4 [Batch Cable Routing](#)
 - 2.5 [Routing Individual Cables and Route Problem Diagnosis](#)
 - 2.6 [Data Entry and Reporting Using Wintab](#)
- 3.0 [Project Login and The Main Menu](#)
 - 3.1 [When making a new project](#)
 - 3.2 [When logging in to an existing project](#)
 - 3.3 [Deleting a Project From List](#)
 - 3.4 [Open DB Exclusive](#)
 - 3.5 [The Main Menu](#)
- 4.0 [Administrative Functions](#)
 - 4.1 [Scope of Administrative Functions](#)
 - 4.2 [Project Data Form and Issue](#)
 - 4.2.2 [Making a Release and Effect on The Construction Database](#)
 - 4.3. [Live Database and the consequences for Construction](#)
 - 4.4 [Project Specific Pull Down Settings](#)
 - 4.4.1 [Conductor sizes](#)
 - 4.4.2 [Voltage Classes](#)
 - 4.5 [Service Levels and Cable Segregation Rules](#)
 - 4.6 [Raceway Types and Cable Segregation Rules](#)
 - 4.7 [Cable Type Catalog Data](#)
 - 4.8 [Raceway Catalog Data](#)
 - 4.9 [Design Control / Revision Rules](#)
 - 4.10 [Cable Wire Colors](#)
- 5.0 [Plant System Descriptions](#)
- 6.0 [Start-Up System Descriptions](#)
- 7.0 [Work Package Descriptions](#)
- 8.0 [Equipment Data](#)
- 9.0 [Electrical Raceway Input](#)
 - 9.1 [Trays](#)
 - 9.1.1 [From and To Points \(Nodes\)](#)
 - 9.2 [Guide Conduits and Duct Bank Conduits](#)
 - 9.3 [End Run Conduits](#)

- 9.4 [Drop- Outs](#)
- 9.5 [Air Ways](#)
- 10.0 [Cable Data](#)
- 11.0 [Wire Terminations](#)
 - 11.1 [Cable Terminations and Jumpers Input Form](#)
 - 11.2 [CableTerminations Spreadsheet](#)
- 12.0 [Logistical Checks](#)
 - 12.1 [Report A1 - Missing Critical Cable Type](#)
 - 12.2 [Report A2 - Missing or Invalid Cable Type in Cable Data](#)
 - 12.3 [Report A3 - Missing or Invalid Routing Data in Cable Data](#)
 - 12.4 [Report A4 - Missing or Invalid Routing Data in Raceway data](#)
 - 12.5 [Report A5 – Raceway Connection Warnings](#)
 - 12.6 [Report A6 – Parallel Raceways Not Size Locked](#)
- 13.0 [Batch Routing](#)
- 14.0 [Single Automatic and Manual Cable Routes](#)
 - 14.1 [Cable Data Form](#)
 - 14.2 [Committed Vias Tab](#)
 - 14.3 [Design Vias Tab](#)
 - 14.4 [Routing With Design Vias](#)
 - 14.5 [Routing Options](#)
- 15.0 [Audits, Calcs and Tools](#)
- 16.0 [Reporting](#)
 - 16.1 [Tray Report Request Form](#)
 - 16.2 [Conduit Report Request Form](#)
 - 16.3 [Cable Report Request Form](#)
 - 16.4 [Equipment Report Request Form](#)
 - 16.5 [Material Report Request Form](#)
- 17.0 [Advanced Tools](#)
- 18.0 [Interfaces For 3D](#)

1.0 Abstract

Cable routing plus the planning/tracking of cable installations are the fundamental functions of CableMatic Plus.

The Design Function

Using spreadsheet methods, the cable designer prepares a list of cables and includes the cable type, origin/destination equipment and service level restrictions. The designer also is responsible for preparing the main electrical raceway design which is input to this program using spreadsheet methods, automated methods provided with 3D data extraction software or using TrayMatic - the GSN 3d design tool. Initial guesses can be made to raceway sizes and CableMatic will compute minimum sizes required using NEC rules. If raceway sizes are fixed, CableMatic will not overload a raceway unless the designer chooses to ignore the overload. The designer is also responsible for the transition of the cables from their respective origins and destinations to main raceway. These transitions may be conduit end runs or drop-outs (drop-outs are not physical raceway enclosures). If 3D functionality is implemented, CableMatic can find tentative transitions between equipment and main raceway by determining what nearby main raceway are available which respects each cable's segregation requirements. Routing is either performed in batch or an individual cable can be routed using either raceway restrictions or forcing the cable into specific raceways. In addition to cable routing, CableMatic Plus will also record termination data. The designer has methods of reporting that restrict the content to selected component attributes and sorting is flexible by almost all data fields.

The Installation Planning Function

The designer will issue the CableMatic database to the installer. CableMatic will prepare and maintain the installer's database as new releases are made by the designer. Design control is provided by automatic changes in revision for both cables and raceways. To facilitate in identifying what attributes for raceway and cable are revised, the installer's reports will highlight the changes. The program also respects the input by the installer of Start-Up System, Work Package and Termination data. When new input is made or changed by the installer, this data will not be overwritten by design data. Installation status of equipment and tray may be recorded using spreadsheet functions. Conduits and cables installation status are recorded using installation tickets, which are prepared by the program. For the purpose of supporting installation planning, the installer's reports will highlight those equipment, raceways and cables that are not installed. The installer has a very robust method of generating reports, which include the design report methods and also can focus on start-up dates and/or the installation status of raceways and equipment. Bills of material reports are available for tray, conduit and cable. CableMatic will also record cable reel data to provide a method for cable inventory control.

2.0 Operational Overview

2.1 Catalogs and Rules

When starting a new project, use the latest CableMatic Plus database template that is provided by the developer. After the new project is started, set up the project data as described in the Administration Functions section of this guide.

Pay special attention to:

- Conductor Sizes
- Cable Type Catalog data
- Raceway Types Data
- Raceway Catalog Data
- Raceway Service Level Data

There are important relationships for this data that must be carefully maintained. Tray and conduit loading and sizing depends upon accurate data entered in all of the above. The rules for cable segregation are also contained in the above data. Be sure to run the logistic checks after you input or change this data.

2.2 Cable Data

Crucial data for each cable are cable type, segregation code and from/to data. The cable segregation code is a one or two character code that identifies what raceway service levels may be used for the cable. A from or to equipment tag is limited to 24 characters. The associated from and to data fields can be used for basically two purposes:

- 1) If you want to route to a raceway node (ex: a point at the end of a conduit or tray drop out), enter the node number. Note: a node number may be anything you want and may represent a location where several cables are routed.
- 2) If you are using TrayMatic and you want CM+ to find the closest tray or electrical box (JBOX or MHOLE) to the equipment, use the AutoDoIT function (press the F5 key) which will create a data string. This data string will instruct CM+ to find either the closest tray and or conduit/dropout end connection (JBOX or MHOLE). The data string will also instruct CM+ to create a conduit or dropout that can be imported by TrayMatic. Please review more about this function in the Help menu AutoDoIT.

2.2 Raceway Matrix

A raceway type may be a ladder tray, solid bottom tray, conduit, duct bank, drop-out or air way. Each raceway tag is limited to 15 characters and has two nodes with each node limited to 15 characters. The nodes are used to identify connections to other raceways. End run raceways (conduits or drop-outs) may connect to a tray at an offset from a tray node. CableMatic will maintain raceway fill for the tray recognizing that all portions of the tray may not be filled the same. Each raceway must have a service level and raceway type. The raceway catalog number is optional since CableMatic will automatically find the catalog item having the minimum size required. This feature is activated when the raceway size is not locked.

When AutoDoIT raceways are created, they will be removed if they are no longer used. The designer has the ability to remove the AutoDoIT indicator and save the raceway even if it is not in use.

2.3 Cable Routing Rules

- Cables cannot use a raceway that has a service level that is incompatible to the cable's segregation code.
- Unless raceway fill checking is set to ignore or a raceway size is not locked, a cable will not use the raceway if it will become overloaded. The rules for raceway fill checking can be

found in the document 'NECRules.xls' which will be provided by GSN Technologies, LLC upon request.

- When raceway utilization checking is in effect, a cable with a utilization code may not use a raceway that does not match that code.
- When conduit work package checking is in effect, a conduit with a work package will not be used unless cable and conduit's work package are the same.
- When conduit work package checking is in effect, a conduit without a work package will not be used if there is another parallel conduit with a work package that is the same as the cable's work package.
- If a single raceway is available (direct run) that joins the from and to equipment that raceway will be the route as a first choice.
- If a cable's from and to connect to offset raceways that connect to the same tray, then the route will be the entry offset raceway, the connecting tray and then the to offset raceway. CableMatic will use the first valid route that it finds regardless if other routes are shorter.
- If the situation above does not occur, the program will find the route with the shortest length. If 3D data is available, the cable route will be penalized by one foot for each bend. This penalty does not contribute to the actual route length.

2.4 Batch Cable Routing

When CableMatic batch routes cables, the cables that are to be routed are first removed from their currently stored raceways. Then each cable is routed and a log is presented at the end of the run, which displays the results at any problems encountered. If your raceway system has only one possible route for a cable you should consider locking the cable routes. Locking the routes will make subsequent runs faster. If you change the raceway matrix that would affect current routes, you can unlock the routes and re-route the cables.

CableMatic permits you to batch route cables using a list of cables or you can select any or all the cable segregation codes. It is customary practice to route all power cables before routing the control and signal cables.

2.5 Routing Individual Cables and Route Problem Diagnosis

Some cable routes may require special attention. An individual cable can be routed using a raceway restriction list. In addition, you may input all or a portion of the cable route and CableMatic will attempt to complete the route and fill in the missing raceways. If you suspect that a routing problem occurs because of raceway overloads, reset the check for tray and/or conduit raceway fill. If the route is successful, CableMatic will indicate the overload problem.

2.6 Data Entry and Reporting Using Wintab

Wintab provides spreadsheet functionality to edit data in each of the tables in the CableMatic Plus database. In addition, a sophisticated searching function provides user friendly data searches based upon any attributes. Copy/cut/paste functions provide the clipboard interface with Excel and other data entry software. Tools include find/replace, prefixing, suffixing and auto numbering. Reports can also be made to HTML web pages.

3.0 Project Log-In and the Main Menu


Log-In Form

3.1 When making a new project or if you need to register an existing project, use the program MakeNewProject (use the button to Make or Register a Project)

1. Enter the project number and Project Name. The project number must be the same as the number in the database name. The project name is used to help identify the project because numbers are often difficult to remember.
2. Enter the model path for the project.
3. Enter the Employee ID. This ID is used to identify your Wintab spreadsheet file (ex: Jerry.tbl).
4. Press Create Project.

Please read and use the document 'Making a New Project' which can be viewed from the help menu.

3.2 When logging in to an existing project:

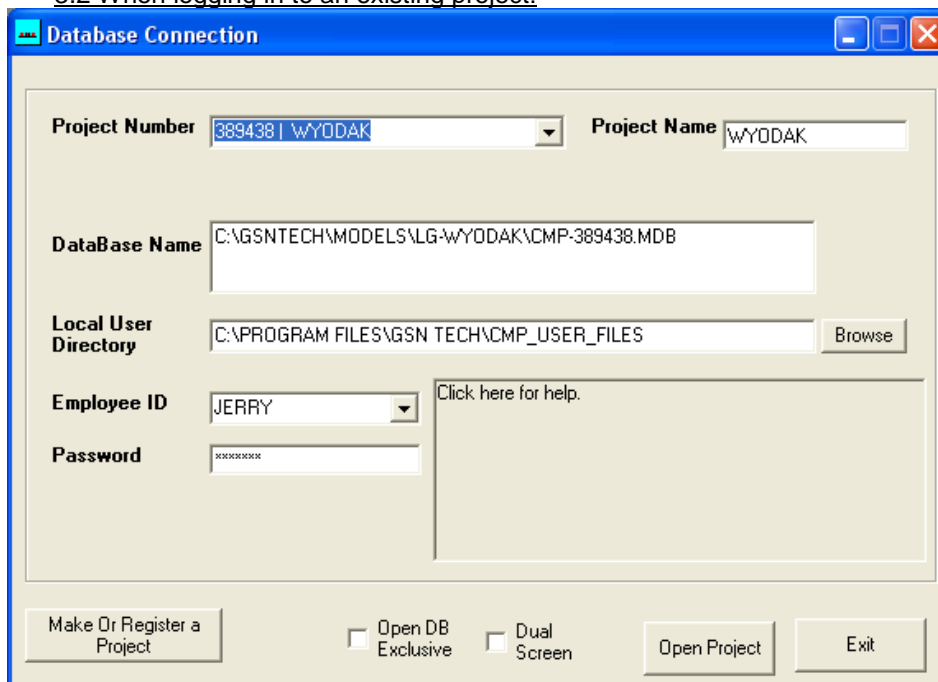

1. Use the Project Number drop down to find the project. If the project is one of the choices, all the other required data will be retrieved.
2. If the project is not one of the choices, register the project on your PC using the button to Make or Register a Project. The MakeNewProject program will launch. After completing the steps as described in paragraph 3.1, start CM+ again to continue.
3. Next time you log in, the project will be in the list.
4. You may change the Local User Directory (or use browse). This directory should be on your local computer drive. This directory is where your Wintab spreadsheets and reports are saved. When dealing with multiple projects, you might want to have a separate directory for each project. If you leave this entry blank, CableMatic will use a default location.

5. You may manually change the employeeid. This ID is used to identify your Wintab spreadsheet file (ex: c:\CMP-ProjectId-Jerry.tbl).
6. The password is not required unless you require administrative privileges.
7. Press Open Project

3.3 Deleting a Project From List:


1. Use the program MakeNewProject to remove the project from your list. It will not actually delete the project.

3.4 Open DB Exclusive

1. Used when a new software update requires change in the database structure, when making an issue or performing functions that should restrict changes or use by others. This feature permits only one user to open the database.

3.5 The Main Menu

When *Open Project* is pressed, the main menu appears.

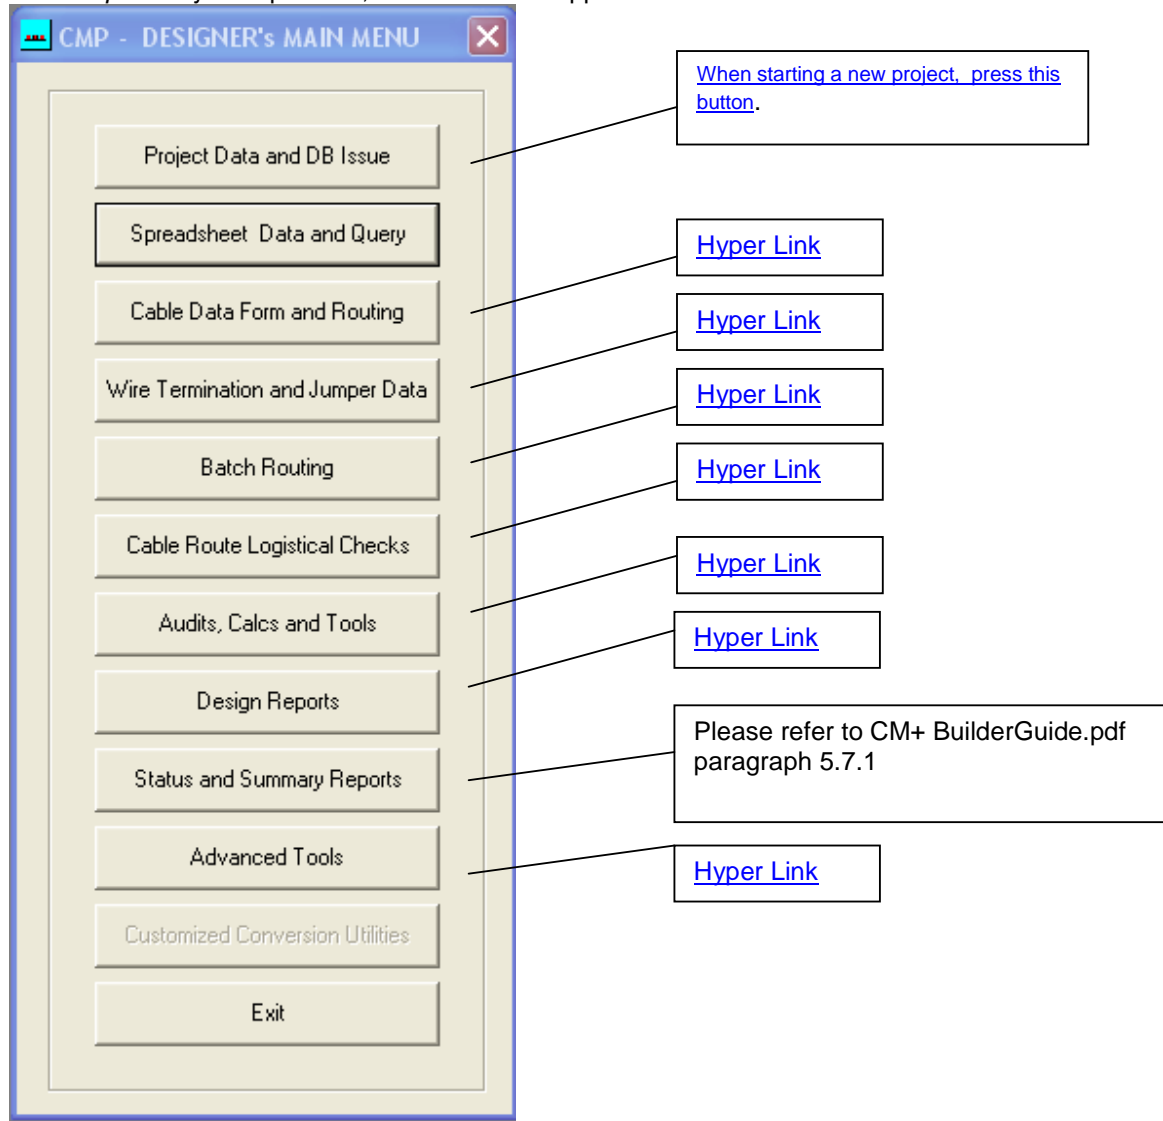

4.0 Administrative Functions

4.1 Scope of Administrative Functions

The administrator is responsible for maintaining project data that includes catalogs, cable segregation, design control rules, cable segregation rules and cable wire color data. In addition, the administrator should be making the releases.

4.2 Project Data Form

The data on this form that requires explanation follows:

- Set the project id and project title
- Live database – if unchecked, CableMatic keeps the designer data separate from the builders data. In order to make builders database, designer must first make an issue and from the issue make a separate builders database. The builder has a capability to create reports that highlight changes from the last issue. If unchecked, the CM+ database is used by the builder with the capability to make any changes in the revisions accessible for the builder right away. However the highlight capability between the revisions is lost. In order to provide it the snapshot db function has been implemented.
- Additional Rt len - the value entered will be added to each cable's route length
- Use TM
- PanelMatic – CableMatic supports a model type "PANEL". When this setting is checked, some common functionality of CM+ will be affected (mainly tolerance settings, but also NEC fill calculations, bend penalty) to adjust to the physical realities of panel design. Also the Bundles function will be available.
- Pull Point Prefix Comma Delimited List - Nodes that begin with these prefixes will be printed in the route. These prefixes must be two characters. The word 'STUB' is an exception. If 'STUB' is in the list, any Nodes that have the word 'STUB' embedded will be printed in the route.
- Project Units – set either to English or metric
- Max Auto Size For Conduits – when resizing conduits the entered value is used as maximum.
- Cable Area Tolerance – used to calculate max fill reserve for conduits
- Cable Design Status Value For Cable Data Lock – cable is considered lock if the value in Design Status field equals the entered value
- Wintab Snapshot – when checked, will perform advanced checking for overwriting data entered by others in a multi-user environment. Data is checked at the cellular level and unless you change data a data cell in your spreadsheet, the database data cell will not be changed.
- Add spare jumpers to cable terminations refers to the Cable Termination and Jumper form. We recommend that this remains unchecked.
- AutoDolt Data – Default Conduit Type when creating AutoDolt conduit the selected conduit type is used.
- Import Company Catalog Data when starting a new project it is recommended to import catalog data from a master database. This function will ask user to select a CM+ database to import data from. Then it prompts the user to "OK" every table to be imported.
- Issue – enabled when Live Database is unchecked. It indicates the last issued database, the date of the issue and an open current revision. The button Clear Last Released Database causes all components to be issued as NEW
- Add QA to Pull and Term Tickets will add a form for QA sign off to these tickets.

Please refer to the guide "Making a New Project" for more details.

Project Data and Database Issue

Project Data

Project Number: 125711 Company: SHAW ☒ **LIVE DATABASE**

Title: Virginia City Hybrid Energy Center - Dominion

Project Units: ☒ English ☐ Metric Additional Rt Len: 20 Pull Point Prefix Comma Delimited List: 10MH,HH,10PB,11PB,12PB,STUB Help

☒ Use TM Max Auto Size For Cond: 2" Cable Area Tolerance [%]: 0

☐ Panel Matic Project Type

☒ Wintab Snapshot Export To DB Function Activated

☒ Include Cable O.D., MBR, Weight and Cable Lay Method on Pull Ticket

☒ Use Style B Term Ticket. Includes Cable Purpose, Termination Notes, Dwg References

☒ Add QA to Pull and Term Tickets

☒ Report Plant System in Cable Schedule

☐ Add spare jumpers to cable terminations

☒ For the Cable Report From/To Dwg: Do not use a raceway's from/to dwg number unless the raceway is in the route.

☒ Cable Design Status of RFR/IFC will lock data for cable routing. IFC required for pull or term ticket printing.

☒ Raceway Design Status: IFC required for installation ticket printing.

Raceway Fill Reserve

Please Set Tray Fill Reserve for each service level in the SERVICE_LEVEL_CODES Wintab Table

AutoDolt Data

Default Cond Type: COND RGS Help

Please read AutoDolt.hlp (see Help menu) or click on Help. Also read Making a New Project (see Help menu).

Data View used for Cable Data Form and Routing: [ACRS -DB]ACRS_CABLE_DATA_2

Snap Shot

Last Snap Shot Database: Browse

Date of last Snap Shot database: Create Snap Shot

Current Open Revision: A Help

Apply OK Import Company Catalog Data Refresh What Changed Cancel

4.2.2 Making a Release and Effect on The Construction Database

This function applies only when the Live Database on the Project Data form is unchecked. Internal releases for design usually use the letter codes A, B, C, etc. When making the first internal release, press the command to clear the last released database and then set the current open revision to 'A'. Then press 'Issue'. The issued database will have the same name as your current database and will have the suffix 'A'. When making the next internal issue, just press the issue command. Cable and raceway revision letters are assigned by comparing the current database with the last issued database. You do have the ability to reset the last issued database but use this capability cautiously.

Releases for construction usually use the codes 0,1,2, etc. When making the first construction release, press the command to clear the last released database and then set the current open revision to '0'. Then press 'Issue'. The issued database will have the same name as your current

database and will have the suffix '0'. When making the next issue, **make sure that your revision rules data is correct** and then press the issue command. Cable and raceway revision letters are assigned by comparing the current database with the last issued database. You do have the ability to reset the last issued database but this should not be done without considering the ramifications to the field. Send the released database to the field. If you are sending the first issue, the field should not have a construction database. The field will import data from the design database to start their database. In subsequent issues, start-up and work package data will not override field input data but new data will replace data that was not input by the field. Cable Wire colors are the responsibility of design but the field may choose not to override their wire colors. In addition cable termination data that is locked in the construction database will not be overridden by design data.

Project Data and Database Issue

Project Data

Project Number: 373007 Company: LG ☐ **LIVE DATABASE**

Title: BASIN ELECTRIC POWER COOPERATIVE - CULBERTSON

Project Units: ☒ English ☐ Metric Additional Rt Len: 30 Pull Point Prefix Comma Delimited List: MH,HH,PB,JB **Help**

☒ Use TM Max Auto Size For Cond: 3" Cable Area Tolerance (%): 0

☐ Panel Matic Project Type

☒ Wintab Snapshot Export To DB Function Activated

☐ Include Cable O.D., MBR, Weight and Cable Lay Method on Pull Ticket

☐ Use Style B Term Ticket. Includes Cable Purpose, Termination Notes, Dwg References

☐ Add QA to Pull and Term Tickets

☐ Report Plant System in Cable Schedule

☒ Add spare jumpers to cable terminations

☒ For the Cable Report From/To Dwg: Do not use a raceway's from/to dwg number unless the raceway is in the route.

☐ Cable Design Status of RFR/IFC will lock data for cable routing. IFC required for pull or term ticket printing.

☐ Raceway Design Status IFC required for installation ticket printing.

Raceway Fill Reserve

Please Set Tray Fill Reserve for each service level in the SERVICE_LEVEL_CODES Wintab Table

AutoDolt Data

Default Cond Type: COND RGS **Help**

Please read AutoDolt.hlp (see Help menu) or click on Help. Also read Making a New Project (see Help menu).

Data View used for Cable Data Form and Routing

[ACRS -DB] ACRS_CABLE_DATA

Issue

Last Released Database: C:\GSNTech\MODELS\LG-Culbertson\CMP-373007-2.mdb **Browse**

Current Open Revision: 3 Date of last issued database: 11/23/2009

Clear Last Released Database **Issue** **Help**

Apply **OK** **Import Company Catalog Data** **Refresh What Changed** **Cancel**

4.3. Live Database and the consequences for Construction

When the Live Database is checked, Design and Construction share the Designer's database. Both disciplines cannot change the other's data. The concept of Last Snap Shot database (see above) is the same as Last Released Database. Raceways are handled the same way as before and cables will have their revision advanced by 1 every time, a designer changes significant data. When making a snap shot or refreshing what's changed, a cable's revision will be changed according to the option selected:

- a) Use Classic Revs means that revisions are as before
- b) Advance revs by 1, if changed means that the cable rev will be one more than the snap shot database selected.
- c) Do not change rev of cables means that the revision will not change (the user will be responsible for the cable's revision).

4.4 Project Specific Pull Down Settings

The CableMatic database table PROJECT_DATA contains pull down data to facilitate data entry while using Wintab. An example is shown below. To customize this data:

- 1) Import data where DATA_TYPE=PULL DOWN VALUE
- 2) Save the Wintab tables (just in case you make mistakes in the process to follow)
- 3) Delete the records from the database (do not cut rows)
- 4) Make changes
- 5) Export to database

Note that DATA_1 contains the database table name and field name. DATA_3 contains a pull down value for that field.

4.4.1 Conductor sizes

Conductor sizes are a special case. DATA_3 contains the size range for the conductor size. CableMatic only understands the size ranges below, restrict your input to these values. This data is critical for tray sizing.

- <1/0
- 1/0-4/0
- >=1000
- 250-900
- SPACED – For ">2KV POWER", width used = $2 \times OD \times \text{NumberOfCableJackets}$
- TRIPLEXED – For ">2KV POWER", width used = $2 \times OD + 2.15 \times OD$
- TRIPLEXED0X – For <=2KV POWER and >2KV POWER. This calc accommodates cable types with 3-1/c and 1/c. The calculation essentially simulates a trifoil configuration where each group of 3 cables are laid without a space.
- TOUCHING– For <=2KV POWER and >2KV POWER. This is essentially the same as a SINGLE LAYER rule except that the pull ticket will read "TOUCHING" instead of "SINGLE LAYER."
- NOFILL – The cable will not cable fill to the tray.

CMP-120631-JERRY.tbl - [ACRS -DB] PROJECT_DATA				
	A DATA TYPE	B DATA 1	C DATA 2	D DATA 3
1	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	#1	<1/0
2	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	#1/0	1/0-3/0
3	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	#10	<1/0
4	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	#12	<1/0
5	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	#14	<1/0
6	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	#16	<1/0
7	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	#18	<1/0
8	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	#2	<1/0
9	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	#2/0	1/0-3/0
10	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	#20	<1/0
11	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	#22	<1/0
12	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	#24	<1/0
13	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	#26	<1/0
14	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	#3	<1/0
15	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	#3/0	1/0-3/0
16	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	#4	<1/0
17	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	#4/0	4/0
18	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	#6	<1/0
19	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	#8	<1/0
20	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	1000 KCMIL	>=1000
21	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	1250 KCMIL	>=1000
22	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	1500 KCMIL	>=1000
23	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	1750 KCMIL	>=1000
24	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	2000 KCMIL	>=1000
25	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	250 KCMIL	250-900
26	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	300 KCMIL	250-900
27	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	350 KCMIL	250-900
28	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	400 KCMIL	250-900
29	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	500 KCMIL	250-900
30	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	600 KCMIL	250-900
31	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	700 KCMIL	250-900
32	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	750 KCMIL	250-900
33	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	800 KCMIL	250-900
34	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	900 KCMIL	250-900
35	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	CAT	<1/0
36	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	COAX	<1/0
37	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	FIBER	<1/0
38	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	NON-PLENUM	<1/0
39	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	PLENUM	<1/0
40	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	SPACED	SPACED
41	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	TEL	<1/0
42	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	TOUCHING	TOUCHING
43	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	TRIPLEXED	TRIPLEXED
44	PULL DOWN VALUE	ACRS CABLE TYPE, CONDUCTOR SIZE	TRIPLEXEDOX	TRIPLEXEDOX

4.4.2 Voltage Classes

Voltage Classes are restricted to: <=2KV POWER, >2KV POWER, ANY MIXTURE and CONTR/SIGNAL.

4.5 Service Levels and Cable Segregation Rules

Raceway service levels and cable segregation codes are limited to two characters. Input a comma delimited list of cable segregation codes that may be used for each service level. When you enter raceway data, the raceway service level must be one of the values you input to this table. You should use this data to control what cables may use a raceway. By careful planning of this data, you can restrict the cables by tray or by conduit. In some design situations, even though trays may share cables of different segregation codes, conduits may have a restriction to only one segregation code. The tray fill reserve is used for tray sizing. Enter this value in per cent. When conduit fill restrictions limit the maximum number of conductors per conduit, enter the

appropriate value. You will find corresponding data in Cable Types where you will enter the number of current carrying conductors.

CMP-JERRY.tbl - [ACRS-DB] ACRS_SERV_LEVEL_CODES									
	A RACEWAY SERVICE LEVEL	B DESCRIPTION	C COMPAT SEGR CODES	D VOLTAGE CLASS	E TRAY FILL RESERVE	F MAX CONDUCTORS IN CONDUIT	G	H	I
1	00	FOR DUCT BANKS	1, 1S, 2, 2S, 4, 5, F,	ANY MIXTURE	0				
2	1	SIGNAL LEVEL 1	1, 1S	CONTR/SIGNAL	0				
3	2	SIGNAL LEVEL 2	2, 2S	CONTR/SIGNAL	0				
4	3	CONTROL	3	ANY MIXTURE	0				
5	4	480V POWER	4	<=2KV POWER	0	2			
6	5	5KV POWER	5	>2KV POWER	0	2			
7	F	FIRE ALARM	F	CONTR/SIGNAL	0				
8	I1	SIGNAL LEVEL 1	1, 1S	CONTR/SIGNAL	0				
9	I2	SIGNAL LEVEL 2	2, 2S	CONTR/SIGNAL	0				
10	I3	CONTROL	3	ANY MIXTURE	0				
11									
12									

COMMA SEPARATED LIST (NO BLANKS) OF COMPATIBLE CABLE SEGREGATION CODES
PROTECTED VALUE

☐ Freeze First Column Raceway Data

4.6 Raceway Types and Cable Segregation Rules

Raceway types must begin with the words 'COND' or 'TRAY SOLID', 'TRAY VENTED', 'TRAY WIREWAY' or 'TRAY LADDER'. Other types include 'DROP OUT', 'AIR WAY' or 'GUIDE CONDUIT' which have special meaning to CableMatic. When inputting 'TRAY something' include the height and material eg: TRAY SOLID 6G, TRAY VENTED 4G, etc. The comma delimited list of permissible cable segregation codes is used by CableMatic to report erroneous use of a raceway type. Whereas an error will not inhibit routing, this check may be important for your project. Useable height is used for tray fill calculations.

CMP-120631-JJ.tbl - [ACRS-DB] ACRS_RACEWAY_TYPE			
	A TYPE	B PERMISSIBLE SEGR CODES	C USEABLE HEIGHT
1	AIR WAY	J, H, L, K, C, X, S, F, M, O, Z, KC	NA
2	COND AL	J, H, L, K, C, X, S, F, M, O, Z, KC	NA
3	COND INNERDUCT	M, O	NA
4	COND PVC-40	J, H, L, K, C, X, S, F, M, O, Z, KC	NA
5	COND PVC-80	J, H, L, K, C, X, S, F, M, O, Z, KC	NA
6	COND RGS	J, H, L, K, C, X, S, F, M, O, Z, KC	NA
7	DROP OUT	J, H, L, K, C, X, S, F, M, O, Z, KC, Y	NA
8	GUIDE COND	J, H, L, K, C, X, S, F, M, O, Z, KC	NA
9	NIPPLE	J, H, L, K, C, X, S, F, M, O, Z, KC	NA
10	TRAY LADDER 7H	J, H, L, K, C, X, S, F, M, O, Z	5
11	TRAY SOLID 7H	J, H, L, K, C, X, S, F, M, O, Z	5
12	TRAY VENTED 7H	J, H, L, K, C, X, S, F, M, O, Z	5
13	TRAY WIREWAY 7H	J, H, L, K, C, X, S, F, M, O, Z	5
14			

4.7 Cable Type Catalog Data

Cable type data is critical of tray and conduit sizing. The cable OD is always used for tray sizing. The override cable area is only used for conduits. Since separate ground conductors are not run in tray but are run in conduit, you should input an override cable area when the 'Ground Conductor' value is 'Y' (meaning a separate ground is included with the cable). Please note that number of conductors are for one cable jacket. Take care that the all conductor sizes have been input to the pull downs in the project data table. If the number of conductors (per cable jacket) is greater than '1', CableMatic uses traysizing rules for multi-conductor cables.

The last field is "Number of Current Carrying Conductors". This value is for the entire cable. If you leave this value blank, CableMatic assumes the value to be the product of the Number if Cable Jackets and Number of Conductors per Cable Jacket. This data is used to restrict cables in conduits and is related to data that is entered in the Service Levels table. This value is used during cable routing and when reporting conduit fill.

In addition the number of conductors plus the 'Chart Name' provides data for preparing termination data.

Permissible segregation codes do not affect cable routing. However CableMatic provides a check to identify cables that use a cable type that does not have a corresponding segregation code.

The screenshot displays the CableMatic software interface. The main window shows a table titled "CMP-JERRYJBI - [ACRS-DB]ACRS_CABLE_TYPE". The table has columns A through Q, with headers: A (CABLE TYPE), B (DESCRIPTION), C (NMNR OF CABLE JACKETS), D (NMNR OF CONDUCTORS), E (CONDUCTOR SIZE), F (GRND COND), G (DIAM), H (CABLE AREA), I (PERMISSIBLE SEGR CODES), J (MBR), K (SPEC), L (WEIGHT), M (COMB WEIGHT), N (NOTE), O (DESIGN NOTE), P (CHART NAME), Q (MANUF), and R (MANUF NT). The table lists various cable types, including 1/C#8, 12TP#14, 12TP#18, 12TSP#16, 12TSP#18, 12TSP#20TCK, 12TST#16, 15/C#14, 19/C#14, 1TP#16, 1TSP#14, 1TSP#16, 1TSP#16H, 1TSP#16TCK, 1TSP#16TCKH, 1TST#16, 2/C#12, W/G, 2/C#14, 2/C#14, 2/C#2/O, W/G, 2-1/C#500, 2-1/C#500KCMIL, 2-1/C#500, 24TP#14, 24TP#18, 24TSP#16, 24TSP#18, 24TSP#20TCK, 2TP#16, 2TP#18, 2TSP#16, and 2TSP#16TCKH.

On the right side of the interface, there is a query form titled "DB QUERY: C:\GSTECH\MODELS\TANKFARM3\CMP-TANKFARM...". The form contains dropdown menus for various fields: CABLE TYPE (1/C#8), DESCRIPTION (1/C#8), NMNR OF CABLE JACKETS (1), NMNR OF CONDUCTORS (1), CONDUCTOR SIZE (#8), GRND COND (Y), DIAM (.27), CABLE AREA (.378), PERMISSIBLE SEGR CODES (4), MBR, SPEC, WEIGHT, COMB WEIGHT, NOTE, DESIGN NOTE, CHART NAME (PWR4), MANUF, MANUF PART NUMBER, INSUL TYPE, INSUL VOLTAGE LEVEL, PERCENT INSUL, SHIELD, CUT SHEET (C:\GSTECH\MODELS\CUTSHEETS\1), and AMT CURRENT CARRYING. At the bottom of the form, there are buttons for "Import To Spread Sheet", "Update This Rec", "Delete This Rec", "FIND", "CLEAR", "REFRESH", and "Mode" (Simple Query, Smart Query).

4.8 Raceway Catalog Data

This data is crucial for tray and conduit sizing. The raceway catalog number is either input to each raceway or CableMatic Plus will calculate it. CableMatic chooses the smallest size that matches the raceway type that is input for the raceway. The description (if entered) will be reported on the Tray and Conduit reports.

Our TrayMatic program uses this data for generating conduit cross sections. If Material is not entered, the word following the COND in Type (Raceway Type) for the material value. The conduit size will be taken as the first word in the Cat Nmbr field. In the event the Cat Nmbr field does not have an embedded blank, the size will be taken from the first word in the description field.

For tray width, input both the inside and outside widths. These widths will be used by TrayMatic, If Conduit O.D. is not input, TrayMatic will deaw conduits using the inside diameter.

CMP-120631-JERRY.tbl - [ACRS-DB] ACRS_RACEWAY_CAT									
	A CAT NMBR	B TYPE	C MATERIAL	D WIDTH	E HEIGHT	F DIAMETER	G DESCRIPTION	H CONDUIT O.D.	I COST CODE
38	5" RGS	COND RGS				5.073			
39	6" AL	COND AL				6.093			
40	6" P/CT RGS	COND PVC/CTD RGS				6.093	PCV COATED		
41	6" PVC-40	COND PVC-40		6.625		6.031			
42	6" PVC-80	COND PVC-80				5.709			
43	6" RGS	COND RGS				6.093			
44	T06X7L	TRAY LADDER 7H	GALV	6/7.5	7				
45	T06X7LA	TRAY LADDER 7H	ALUMINUM	6/7.5	7				
46	T06X7S	TRAY SOLID 7H	GALV	6/7.5	7				
47	T06X7SA	TRAY SOLID 7H	ALUMINUM	6/7.5	7				
48	T06X7V	TRAY VENTED 7H	GALV	6/7.5	7				
49	T06X7VA	TRAY VENTED 7H	ALUMINUM	6/7.5	7				
50	T12X4LF	TRAY LADDER 4H	FIBERGLASS	12	4				
51	T12X6LA	TRAY LADDER 6H	ALUMINUM	12/13.5	6				
52	T12X6LF	TRAY LADDER 6H	FIBERGLASS	12	6				
53	T12X7L	TRAY LADDER 7H	GALV	12/13.5	7				
54	T12X7LA	TRAY LADDER 7H	ALUMINUM	12/13.5	7				
55	T12X7S	TRAY SOLID 7H	GALV	12/13.5	7				
56	T12X7SA	TRAY SOLID 7H	ALUMINUM	12/13.5	7				
57	T12X7V	TRAY VENTED 7H	GALV	12/13.5	7				
58	T12X7VA	TRAY VENTED 7H	ALUMINUM	12/13.5	7				
59	T18X4LF	TRAY LADDER 4H	FIBERGLASS	18	4				
60	T18X7L	TRAY LADDER 7H	GALV	18/19.5	7				
61	T18X7LA	TRAY LADDER 7H	ALUMINUM	18/19.5	7				
62	T18X7S	TRAY SOLID 7H	GALV	18/19.5	7				
63	T18X7SA	TRAY SOLID 7H	ALUMINUM	18/19.5	7				
64	T18X7V	TRAY VENTED 7H	GALV	18/19.5	7				
65	T18X7VA	TRAY VENTED 7H	ALUMINUM	18/19.5	7				
66	T24X4LF	TRAY LADDER 4H	FIBERGLASS	24	4				
67	T24X6LA	TRAY LADDER 6H	ALUMINUM	24/25.5	6				
68	T24X6LF	TRAY LADDER 6H	FIBERGLASS	24	6				
69	T24X7L	TRAY LADDER 7H	GALV	24/25.5	7				
70	T24X7LA	TRAY LADDER 7H	ALUMINUM	24/25.5	7				
71	T24X7S	TRAY SOLID 7H	GALV	24/25.5	7				
72	T24X7SA	TRAY SOLID 7H	ALUMINUM	24/25.5	7				
73	T24X7V	TRAY VENTED 7H	GALV	24/25.5	7				
74	T24X7VA	TRAY VENTED 7H	ALUMINUM	24/25.5	7				
75	T30X7L	TRAY LADDER 7H	GALV	30/31.5	7				
76	T30X7LA	TRAY LADDER 7H	ALUMINUM	30/31.5	7				

4.9 Design Control / Revision Rules

When an issue is made that succeeds a previous issue, CableMatic compares the previous issue with the current issue. Only the fields that are indicated in this data will be compared. If the data is different or the component is new, the component will acquire the revision of the current open revision. In addition, CableMatic records what fields changed for each component. These recordings provide "user friendly option" to highlight changed data on the construction reports. Although Work package and Start-Up System appear on Cable and Conduit reports, these attributes should not be used to effect a revision change. The reason for this is that the field is responsible for this data and changes made by design will not override the field's data.

CMP-JERRY.tbl - [ACRS-DB] REVISION_RULES		
	A COMP TYPE	B VAR NAME
1	CABLE	CAB TYPE CODE
2	CABLE	EQUIP FROM TAG
3	CABLE	EQUIP TO TAG
4	CABLE	NOTE 1
5	CABLE	NOTE 2
6	CABLE	PLANT SYS CODE
7	CABLE	RT LEN
8	CABLE	RT LEN OVERRIDE
9	CABLE	SEGR CODE
10	CABLE	TERM DWG 1
11	CABLE	TERM DWG 2
12	CONDUIT	FROM OFFSET
13	CONDUIT	FROM POINT
14	CONDUIT	LENGTH
15	CONDUIT	PLAN DWG NMBR FROM
16	CONDUIT	PLAN DWG NMBR TO
17	CONDUIT	RAC CAT NMBR
18	CONDUIT	RACEWAY TYPE
19	CONDUIT	SERV LVL
20	CONDUIT	TO POINT
21	TRAY	FROM OFFSET
22	TRAY	FROM POINT
23	TRAY	LENGTH
24	TRAY	PLAN DWG NMBR FROM
25	TRAY	PLAN DWG NMBR TO
26	TRAY	RAC CAT NMBR
27	TRAY	RACEWAY TYPE
28	TRAY	SERV LVL
29	TRAY	TO POINT
30		
FIELD NAME THAT SHOULD BE COMPARED		
PROTECTED VALUE		
REQUIRED VALUE		

4.10 Cable Wire Colors

This data facilitates the data preparation for cable wire terminations. The Chart Name indicated here is also input for each cable type. Be sure to use the SEQ NO to order the data.

To make changes when the chart name already exists:

- 1) Import the data for the chart
- 2) Save the Wintab table (in case you make errors in the following process)
- 3) Delete the chart data.
- 4) Make changes in the chart
- 5) Export the data to the database (insert and override or insert only)

CMP-JERRY.tbl - [ACRS-DB] ACRS_WIRE_COLORS			
	A CHART NAME	B SEQ NO	C NUMBER/COLOR
1	CHART 2 & 2R	001	1 BLACK
2	CHART 2 & 2R	002	2 WHITE
3	CHART 2 & 2R	003	3 RED
4	CHART 2 & 2R	004	4 GREEN
5	CHART 2 & 2R	005	5 ORANGE
6	CHART 2 & 2R	006	6 BLUE
7	CHART 2 & 2R	007	7 WHITE/BLACK
8	CHART 2 & 2R	008	8 RED/BLACK
9	CHART 2 & 2R	009	9 GREEN/BLACK
10	CHART 2 & 2R	010	10 ORANGE/BLACK
11	CHART 2 & 2R	011	11 BLUE/BLACK
12	CHART 2 & 2R	012	12 BLACK/WHITE
13	CHART 2 & 2R	013	13 RED/WHITE
14	CHART 2 & 2R	014	14 GREEN/WHITE
15	CHART 2 & 2R	015	15 BLUE/WHITE
16	CHART 2 & 2R	016	16 BLACK/RED
17	CHART 2 & 2R	017	17 WHITE/RED
18	CHART 2 & 2R	018	18 ORANGE/RED
19	CHART 2 & 2R	019	19 BLUE/RED
20	CHART 2 & 2R	020	20 RED/GREEN
21	CHART 2 & 2R	021	21 ORANGE/GREEN
22	CHART 2 & 2R	022	22 BLACK/WHITE/RED
23	CHART 2 & 2R	023	23 WHITE/BLACK/RED
24	CHART 2 & 2R	024	24 RED/BLACK/WHITE
25	CHART 2 & 2R	025	25 GREEN/BLACK/WHITE
26	CHART 2 & 2R	026	26 ORANGE/BLACK/WHITE
27	CHART 2 & 2R	027	27 BLUE/BLACK/WHITE
28	CHART 2 & 2R	028	28 BLACK/RED/GREEN
29	CHART 2 & 2R	029	29 WHITE/RED/GREEN
30	CHART 2 & 2R	030	30 RED/BLACK/GREEN
31	CHART 2 & 2R	031	31 GREEN/BLACK/ORANGE
32	CHART 2 & 2R	032	32 ORANGE/BLACK/GREEN
33	CHART 2 & 2R	033	33 BLUE/WHITE/ORANGE
34	CHART 2 & 2R	034	34 BLACK/WHITE/ORANGE
35	CHART 2 & 2R	035	35 WHITE/RED/ORANGE
36	CHART 2 & 2R	036	36 ORANGE/WHITE/BLUE
37	CHART 2 & 2R	037	37 WHITE/RED/BLUE
38	CHART 2 & 2R	038	38 BLACK/WHITE/GREEN

5.0 Plant System Descriptions

Wintab will store descriptions for the plant systems. Plant system code is input for cables and equipment and reports can be selected and sorted by this data.

CMP-JERRY.tbl - [ACRS -DB] ACRS_PLANT_SYS_CODE									
	A PLANT SYS CODE	B DESCRIPTION	C	D	E	F	G		
1	BOP	BALANCE OF PLANT							
2	CTG51	COMBUSTION TURBINE GENERATOR 51							
3	CTG52	COMBUSTION TURBINE GENERATOR 52							
4	STG5	STEAM TURBINE GENERATOR							
5	WT	WATER TREATMENT							
6									
7									
8									
9									
REQUIRED VALUE									

6.0 Start-Up System Descriptions

Wintab will store descriptions for the start-up systems. Start-Up system code is input for cables and equipment and reports can be selected and sorted by this data. Date required is input in the format of YY-MM-DD. Once the first release database is delivered to construction, the field should maintain start-up system data. If this is not the case, please have the field remove all start-up system data in their corresponding table of their database.

CMP-JERRY.tbl - [ACRS -DB] ACRS_START_UP_SYSTEM									
	A START UP SYSTEM	B DESCRIPTION	C DATE REQD	D	E	F	G	H	I
1									
2									
3									
4									
5									
6									
7									
8									
REQUIRED VALUE									

7.0 Work Package Descriptions

Wintab will store descriptions for the work packages. Work package is input for cables and conduits and reports can be selected and sorted by this data. Once the first release database is delivered to construction, the field should maintain work package data. If this is not the case, please have the field remove all work package data in their corresponding table of their database.

	A WORK PKG	B DESCRIPTION	C	D	E	F	G
1							
2							
3							
4							

REQUIRED VALUE

☐ Freeze First Column Raceway Data

8.0 Equipment Data

Equipment descriptions are important data that helps in the construction activity. Data such as Bldg, Area, Sub Area Xloc, Yloc, Zloc should probably be generated from other applications. Xloc, Yloc and Zloc are intended to support the automated generation of conduits from equipment to tray. The data source field can be used to record where data came from. In this example, the data source 'CABLE' indicates that the equipment tags were generated from a tool within CableMatic that created an equipment record for each cable from and to. The description was probably inputted manually but theoretically, this description could be imported from an external application. The 'Is Single System' field indicates whether a cable going to that equipment can derive its start-up system code from the equipment. Rules on how this field is used is described under the section Audits, Calcs and Tools. The Retrieval Code field, will be used in TrayMatic for purposes of retrieving the location of the equipment by area, system, etc. The Box Size is used when TrayMatic imports data from CM+ for the first time. You may enter one value to represent all three dimensions or three values (Width, Depth and Height). Please refer to the AutoCADBlocks.pdf for detail of how Block Name is used.

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S
EQUIP TAG	EQUIP DESCR	PLANT SYS CODE	START UP SYSTEM	IS SINGLE SYSTEM	BLDG	AREA	SUB AREA	LOCATION DWG	XLOC	YLOC	ZLOC	DATA SOURCE	JIP_USH	TM RETRIEVAL CODE	TBOX SIZE	WORK PACKAGE	BLOCK NAME	
1	00ED-BAT-1001A	FGD CONTROL BUILDING ELEC ED			EB			CLS00-LG-E-EB.01.PL-02	10549.023	9614.084	763.672	TM						
2	00ED-BAT-1001B	FGD CONTROL BUILDING ELEC ED			EB			CLS00-LG-E-EB.01.PL-02	10549.023	9614.084	763.672	TM						
3	00ED-BAT-1002A	FGD CONTROL BUILDING ELEC ED			EB			CLS00-LG-E-EB.01.PL-02	10549.023	9614.084	763.672	TM						
4	00ED-BAT-1002B	FGD CONTROL BUILDING ELEC ED			EB			CLS00-LG-E-EB.01.PL-02	10549.023	9614.084	763.672	TM						
5	00ED-BAT-1003	FGD CONTROL BUILDING ELEC ED			EB			CLS00-LG-E-EB.01.PL-02	10549.023	9614.084	763.672	TM						
6	00ED-BAT-1004	BATTERY			00RW			CLS06-LG-E-YD.36.ED										
7	00ED-BAT-1004A	RAW WATER PUMP STRUCTURE ED			00RW			CLS06-LG-E-YD.36.ED										
8	00ED-BAT-1004B	RAW WATER PUMP STRUCTURE ED			00RW			CLS06-LG-E-YD.36.ED										
9	00ED-BAT-1005	RAW WATER PUMP STRUCTURE ED			00RW			CLS06-LG-E-YD.36.ED										
10	00ED-BAT1005/00F	INVERTER/TRANSFORMER																
11	00ED-BAT-1006A	RAW WATER PUMP STRUCTURE ED			00RW			CLS06-LG-E-YD.36.ED										
12	00ED-BAT-1006B	RAW WATER PUMP STRUCTURE ED			00RW			CLS06-LG-E-YD.36.ED										
13	00ED-BAT-9000A	WWT 125 VDC BATTERY			WT													
14	00ED-BAT-9000B	WWT 125 VDC BATTERY			WT													
15	00ED-BKR-1001A	Raw Water Pump Structure ED																
16	00ED-BKR-1001B	Raw Water Pump Structure ED																
17	00ED-BKR-1002A	Raw Water Pump Structure ED																
18	00ED-BKR-1002B	Raw Water Pump Structure ED																
19	00ED-DSW-1001	FGD CONTROL 125VDC ED			EB			CLS00-LG-E-EB.01.PL-02										
20	00ED-DSW-1001A	DC MAIN DISCONNECT			EB			CLS00-LG-E-EB.01.PL-02										
21	00ED-DSW-1001B	DC MAIN DISCONNECT			EB			CLS00-LG-E-EB.01.PL-02										
22	00ED-DSW-1002	DISCONNECT SWITCH			00RW			CLS06-LG-E-YD.36.ED										
23	00ED-DSW-1002A	RAW WATER PUMP STRUCTURE ED			00RW			CLS06-LG-E-YD.36.ED										
24	00ED-DSW-1002B	RAW WATER PUMP STRUCTURE ED			00RW			CLS06-LG-E-YD.36.ED										
25	00ED-PNL-1001	UNIT 5 AND COMMON ELEC ED			EB			CLS00-LG-E-EB.01.PL-02										
26	00ED-PNL-1002	125VDC REAGENT PREP BLDG ED			FR			CLS00-LG-E-PD.01.ED										
27	00ED-PNL-1003	125VDC LIMESTONE			LH			CLS06-LG-E-YD.40.ED										
28	00ED-PNL-1004	125VDC ABSORBER BLDG ELEC ED			00FA			CLS00-LG-E-FA.03.PL-02										
29	00ED-PNL-1005	RAW WATER PUMP STRUCTURE ED			IS			CLS06-LG-E-YD.36.ED										
30	00ED-PNL-1005A	125VDC FGD CONTROL BLDG ED			EB			CLS00-LG-E-EB.01.PL-02										
31	00ED-PNL-1005B	125VDC FGD CONTROL BLDG ED			EB			CLS00-LG-E-EB.01.PL-02										
32	00ED-PNL-1006	RAW WATER PUMP STRUCTURE ED			00RW			CLS06-LG-E-YD.36.ED										
33	00ED-PNL-3300	125VDC PANEL																
34	00ED-PNL-4000	125VDC RAW WATER PUMP			00RW			CLS06-LG-E-YD.36.ED										
35	00ED-PNL-9000	WWT 125 VDC POWER DIST ED			WT			CLS00-PB-E-ED-07										
36	00ED-TB-0001	UNIT 5 & 6 COM ELEC ROOM ED						CLS00-LG-E-EB.01.PL-02										
37	00ED-TB-0002	125VDC OFFPUMP/DEWATERING ED						CLS00-LG-E-YD.01.ED										
38	00ED-TB-0003	125VDC LIMESTONE			FD			CLS06-LG-E-YD.40.ED										

DB QUERY: C:\AGSTECH\MODELS\SHAW-CLIFFSIDE\CM...

EQUIP TAG	
EQUIP DESCR	
PLANT SYS CODE	
START UP SYSTEM	
IS SINGLE SYSTEM	
BLDG	
AREA	
SUB AREA	
LOCATION DWG	
XLOC	
YLOC	
ZLOC	
ACCESS DIR LIST	
DATA SOURCE	
EQUIP_USER1	
TM RETRIEVAL CODE	
TBOX SIZE	
WORK PACKAGE	
BLOCK NAME	

Mode

☐ Simple Query
 ☒ Smart Query

9.0 Electrical Raceway Input

When TrayMatic is not being used, data is input using a spreadsheet. This form lists the data entries that appears in the spreadsheet. The same data is used for all type of raceways.

The screenshot shows a software window titled "DB QUERY: C:\GSNTCH\MODELS\SHAW-CLIFFSIDE\CM...". The window contains a form with various input fields, each with a label and a dropdown menu. The fields are as follows:

Field Label	Value
RACEWAY TAG	00CC004AC2
SERV LVL	C
CONSTR AREA	
FROM PLAN DWG NMBR	CLS06-UG-E-YD.40.EN-01
FROM LOCATION	00DC004AC2
TO PLAN DWG NMBR	CLS06-CT-E-YD.40.EN-01
TO LOCATION	
RACEWAY TYPE	COND RGS
RAC CAT NMBR	5" RGS
CAP USED	16%
SIZE LOCK	Y
LENGTH	6.0
FROM	00EQLH0008
FROM OFFSET	
TO	00EQLH0020
UTIL CODE	
WORK PKG	
NOTE1	
NOTE2	
REV	
AUTO DO IT	N
SOURCE	TM 00CCYD
RWAY USER1	
DESIGN STATUS	

Below the form, there are several buttons and controls:

- Buttons: Import Sorted, Import in DbQuery Order, Update This Rec, Delete This Rec, FIND, CLEAR, REFRESH.
- Mode section: Simple Query (radio button), Smart Query (radio button, selected).
- Page indicator: 1 of 10878.
- Navigation arrows: Left and Right arrows.

9.1 Trays

A tray is an electrical raceway that has at a minimum service level, raceway type, length and from and to nodes. The From Offset field should be left blank. When the size lock is not 'Y', CableMatic will size the tray and select the raceway catalog number according to NEC rules. The user may change the raceway catalog number but that value should be consistent with the raceway type. To ensure that the data is consistent, select a value using the F3 key pull down. CableMatic can also store an accurate geometrical path of the tray. This type of data would be imported from a 3D application. Utilization code may be used to keep cables from automatically be assigned to the tray during automatic routing. The rule is that if a raceway has a utilization code, then a cable using it, must have the same utilization code. From and To Location is printed on the tray fill report. CM+ supports separators for the trays. See Using Tray Dividers or Separators in the help menu.

9.1.1 From and To Points

The From and To points on Trays create a connectivity network between trays that enable automatic Cable Routing. When designing trays in TrayMatic, From and To Points get entered automatically by updating (synchronizing) CableMatic data with TM data. The format and the naming conventions of the From/ToPoints are as follows.

The From point of a tray is on the side of a Tray that has the lower X, lower Y or lower Z location. The To point is the other end of the tray. If a tray does not connect to another tray, the node point will be named <tray name>:A or <tray name>:Z respectively.

Eg.: TC-001:A, TC-001:Z

If the tray connects to another tray or list of trays, the tray with the lowest name (alphabetically) will be used as a node name, followed by "A" or "Z". That node name will be listed on the from or to side of every tray connected.

If the project does not use TrayMatic, the user will use the ACRS_TRAY_END_CONNECTIVITY table to enter the connecting tray ends himself. After that, run Advanced Tools->Process Tray Connectivity List to update the From/To points.

9.2 Guide Conduits and Duct Bank Conduits

A Guide Conduit is a virtual conduit that represents a group of embedded conduits that follow the same path. The idea is that all cables following that path can be routed (temporarily) in the Guide Conduit without restriction to overfill or service level segregation. CM+ will report fill by the cross sectional area of cable for each cable segregation code and therefore you can decide how many conduits to input for each service level. When entering the Guide Conduit, use '00' for the service level and 'GUIDE CONDUIT' for Raceway Type. Utilization code is used for the duct bank conduits to "force" cables into specific conduits. The rule is that if a raceway (or duct bank conduit) has a utilization code, then a cable using it, must have the same utilization code. Data required is the same as for trays (service level, raceway type, length and from and to nodes).

9.3 End Run Conduits

An end run conduit is an electrical raceway that has at a minimum service level, raceway type, length and 'From' and a to node (should be an equipment tag). An end run conduits may leave a tray at an offset or leave a tray or other conduit at a node. The 'From' may be a node or a tray. When the 'From' is a tray, you must enter a 'From Offset'. The 'From Offset' may have several input options:

- 1) If a number is input, then that number is the length in feet from the 'From node' of the tray that is in the 'From' field.
- 2) If a percentage is entered then that percentage is the portion of the length of tray in the 'From' field as measured from the 'From node'.
- 3) To measure from the 'To node' of the tray in the 'From' field, input the node number followed by a 'V' and then either a length in feet or a percentage.

When the size lock is not 'Y', CableMatic will size the conduit and select the raceway catalog number according to NEC rules. The user may change the raceway catalog number but that

value should be consistent with the raceway type. To ensure that the data is consistent, select a value using the F3 key pull down.

When From and/or To Dwg Reference numbers are not entered, they will be retrieved from the related reference drawing numbers of the connecting equipment. If no drawing is retrieved connecting trays are used.

When From and/or To Location are not entered, the From and To Point is used if it has meaning. For example, connecting equipment, man holes, stub ups and trays. If a conduit fitting is a connection (JBOX), the connecting conduits would be used.

9.4 Drop-Outs

A drop-out is a raceway conveyor that is used when a cable leaves a tray and then connects an equipment without using a conduit. It is a non physical raceway that has the same properties as an end run conduit except that 'size lock' and raceway catalog number has no meaning. The raceway type must be 'DROP OUT'. The tag of a drop-out will appear in the route of the cable when it is printed.

9.5 Air Ways

An air way connects two tray nodes and is used when there is a gap between trays. It is a non physical raceway that has the same properties as a tray except that 'size lock' and raceway catalog number has no meaning. The raceway type must be 'AIR WAY'. An air way tag will not appear in the route or the cable when it is printed on reports or pull tickets.

10.0 Cable Data

Cables have many attributes and we have to show the spreadsheet in two parts (see below).

Note that we checked the box 'Freeze First Column' so that we can

See the cable tag. This spread sheet also has a shorter layout with less attributes. That option is set using the options menu on the Designer's main menu screen.

Crucial data for each cable are cable type, segregation code and from/to data. The cable segregation code is a one or two character code that identifies what raceway service levels may be used for the cable. A from or to equipment tag is limited to 15 characters. This tag may also be used as raceway node. When the tag is not a raceway node, you must use the associated data field for the corresponding from or to. This associated data field may be a raceway node or an "AutoDolt" data string. The AutoDolt data string provides the ability for automatic creation of a conduit or drop-out from a raceway (usually a tray). The AutoDolt field has a "wizard" that helps prepare data. This is activated by menu or by pressing the 'F5' key while in the AutoDolt field. See the document AutoDolt.hlp which can be viewed from the 'Help' menu.

Some attributes are used for retrieval and sorting and have no active functions. These are Design Status, Design Note, Department Source and Pull Code.

Work package - cables with the same work package will be automatically routed in that raceway. Manual selections using cable design vias are not affected.

Utilization Code – When a conduit is given a work package code, only cables with the same work package will be automatically routed in that raceway. Manual selections using cable design vias are not affected.

Both Rt Len and REV are protected fields that should not be changed

Rt Len – Calculated by CableMatic as the single circuit length plus an additional reserve length that is set using the Project Data form. Rt Len Override will override this value in the cable report, pull ticket or when cable inventory is being reported.

CMP-JERRY.tbl - [ACRS -DB] ACRS_CABLE_DATA									
	A CAB TAG	B TERM DWG1	C TERM DWG2	D CAB TYPE CODE	E SEGR CODE	F EQUIP FROM TAG	G ASSOC FROM TAG	H EQUIP TO TAG	I ASSOC TO TAG
1	CM0001	E-2004	E-2004	3-1/C#750MV	5	50-TR004A		50-SWGRO01	
2	CM0002	E-2004	E-2004	3-1/C#750MV	5	50-TR004A		50-SWGRO01	
3	C-5CW -TE	5CW	5CW	1TST#16	1	50-DCS57B		5CW -TE	50-MIECT001C
4	C-5CW -TE	5CW	5CW	1TST#16	1	50-DCS57B		5CW -TE	50-MIECT001C
5	C-5CW -TE	5CW	5CW	1TST#16	1	50-DCS57B		5CW -TE	50-MIECT001C
6	CC373CD-1	8188D66-52	8188D66-52	2/C#14	3	51-CTGMCC1	51-CTEP-12	51-TE-JB1	
7	CC373CH-1	8188D66-52	8188D66-52	2/C#14	3	51-CTGMCC1	51-CTEP-12	51-TE-JB1	
8	CP342BA-1	8188D66-34	8188D66-34	3/C#2/O, W/G	4	51-MCCDC	51-CTEP-14	51-SP-JB3	
9	CP344AA-1	8188D66-36	8188D66-36	3/C#10, W/G	4	51-CTGMCC1	51-CTEP-12	51-COS-JB2 (1)	
10									

The NEC RULE OVERRIDE will override the related conductor size of the cable type to be used for Tray fill calculations.

CMP-JERRY.tbl - [ACRS -DB] ACRS_CABLE_DATA									
	A CAB TAG	J ROUTE NOTE	K CABLE NOTE	L WORK PKG	M PLANT SYS CODE	N START UP SYSTEM	O ROUTE LOCK	P DESIGN STATUS	Q RT LEN
1	CM0001					EBF-1-	Y		145
2	CM0002					EBF-1-	Y		145
3	C-5CW -TE					CT-0-2			371
4	C-5CW -TE					CT-0-2			371
5	C-5CW -TE					CT-0-2			371
6	CC373CD-1	SW							104
7	CC373CH-1	SW							104
8	CP342BA-1	SW							54.0
9	CP344AA-1	SW							105
10									

DB QUERY: C:\AGS\TECH\MODELS\SHAW-CLIFFSIDE\CM...

CAB TAG	
TERM DWG1	
TERM DWG2	
CAB TYPE CODE	
SEGR CODE	
EQUIP FROM TAG	
ASSOC FROM TAG	
EQUIP TO TAG	
ASSOC TO TAG	
ROUTE NOTE	
CABLE NOTE	
WORK PKG	
PLANT SYS CODE	
START UP SYSTEM	
ROUTE LOCK	
DESIGN STATUS	
TERM DESIGN STATUS	
RT LEN	
RT LEN OVERRIDE	
ESTIMATED CAB LENGTH	
DESIGN NOTE	
UTIL CODE	
P AND ID	
PULL CODE	
REV	
DEPT SOURCE	
ONE LINE	
SCHEMATIC	
BACKFEED	
NEC RULE OVERRIDE	

Import Sorted

Import in DbQuery Order

Update This Rec

Delete This Rec

FIND

CLEAR

REFRESH

Mode

Simple Query

Smart Query

11.0 Wire Terminations

The purpose for preparing wire termination data is to offer the field a cable termination installation ticket that records the wire connections. If this data is not prepared, the a cable termination installation ticket can still be printed but the wire numbers and terminal numbers will be blank. At the very least, the designer/administrator should input the [Cable Wire Colors](#) and the chart name for each cable type.

There are two methods for preparing wire termination data. Data can be entered one cable at a time using the [Cable Terminations and Jumpers Input Form](#) or many cables can be prepared simultaneously using the Wintab.

Cable Terminations spreadsheet. The advantage of the spreadsheet is that data can be prepared from other databases and/or Excel and then pasted to Wintab.

11.1 Cable Terminations and Jumpers Input Form

Press enter after you input or select the cable tag. If there is data recorded for the cable, it will appear. If no data was saved, the wire colors from the Cable Wire Colors are displayed that correspond to the cable type's Chart Name. The delete button will remove termination data for the cable and Update will save whatever is shown. Reset colors is used in the event that the wire colors are missing or have been incorrectly altered. You may edit the wire colors if required. You should save the data if you want to print the ticket, otherwise the printed ticket will contain the data that is stored in the database.

This example is for Style 'B' cable termination tickets. Style 'A' does not contain Cable Purpose, From/To sections, Notes and reference drawings.

Cable Terminations and Jumpers Input Form

Cable Tag: 10-CH-JB-7030D2-B-C-01 STYLE: B

CABLE TYPE: C2C14

CABLE TYPE DESCR: 2/CONDUCTOR #14 AWG ST-UP SYS/WRK PKG: 38-1.02

CABLE PURPOSE: VIBRATORY FEEDERS START BEACON

FROM DEVICE: 10-CS-CAB-0007-C1 TO DEVICE: 10-CH-JB-7030D2-B

SECTION:

PLAN FROM DWG:

PLAN TO DWG:

TERM FROM DRAWING: DCS I/O LIST TERM TO DRAWING: 125711-104567-1127

FROM or TO TICKET PRINTED: N CHART NAME: E-2

DATA SOURCE:

SEQ NO	FROM POINT	WIRE COLOR	WIRE NO	TO POINT	NOTE	REV
001	4.2.3.2 16 16NO	BK	10CHYL7030D2BC01-1	TB1	1	
002	4.2.3.2 16 16C	RD	10CHYL7030D2BC01-2	TB2	1	

NOTES:
1. ELECTRONIC SIGNAL AND POWER TO BE WIRED TO FIELD INSTALLED JUNCTION BOX. JUNCTION BOX MUST BE LOCATED TO ACCOMMODATE SIGNAL AND POWER LEADS. JUNCTION BOX AND CONDUIT MUST BE SUITABLE FOR THE HAZARDOUS LOCATION APPLICATION.

REFERENCE DRAWINGS:
125711-104567-0055 - POWER - P&ID
125711-104567-0082 - POWER - MH (COAL) I/O LIST
125711-104567-1127 - CH EXS301R/120 BEACON
125711-10700-E-INT-CH-002-4 - TYPE 9 FIELD JUNCTION BOX DETAIL

Buttons: Delete, Reset Colors, Term Status, Print Tickets, Update, Print This Ticket, From Eq Config, To Eq Config, Exit

11.2 Cable Terminations Spreadsheet

In the example below, data was pasted from Excel, however the number/color fields were empty in the Excel spreadsheet. When the Save Cable terminations button is pressed, any missing number/color is retrieved from The Cable Wire Colors table and Seq No is automatically input by CableMatic.

CMP-JERRY.tbl - [ACRS-DB] CABLE_TERMINATIONS

	A SEQ NO	B CAB TAG	C FROM TERM PT	D NUMBER/COLOR	E WIRE NUMBER	F TO TERM PT	G DATA SOURCE	H
1	001	C-5AA -LT -905	7B TB1-5	1 WHT	7B TB1-5/TS-1 +	TS-1 +	INST	
2	002	C-5AA -LT -905	7B TB1-6	1 BLK	7B TB1-6/TS-1 -	TS-1 -	INST	
3	001	C-5AA -PT -900	7B TB1-7	1 WHT	7B TB1-7/TS-1 +	TS-1 +	INST	
4	002	C-5AA -PT -900	7B TB1-8	1 BLK	7B TB1-8/TS-1 -	TS-1 -	INST	
5	001	C-5AE -LSL -917	1A TB2-5	1 WHT	1A TB2-5/TS-1 C	TS-1 C	INST	
6	002	C-5AE -LSL -917	1A TB2-6	1 BLK	1A TB2-6/TS-1 NO	TS-1 NO	INST	
7	001	C-5AE -LSL -918	1B TB2-5	1 WHT	1B TB2-5/TS-1 C	TS-1 C	INST	
8	002	C-5AE -LSL -918	1B TB2-6	1 BLK	1B TB2-6/TS-1 NO	TS-1 NO	INST	
9								
10								

SEQUENCE NUMBER 001,002,ETC
REQUIRED VALUE

☐ Freeze First Column Raceway Data Save Cable Terminations

There are some special methods for recording JUMPERS and NOTES. Below are instructions which are displayed when you select the Wintab menu command - Help/For Current Table.

CableMatic Plus

DATA_SOURCE - DATA SOURCE (OPTIONAL)

SEQ_NO - SEQUENCE NUMBER 001,002,ETC

CAB_TAG - (no help)

FROM_TERM_PT - FROM TERMINAL POINT NUMBER

COLOR - NUMBER AND COLOR.
IF THIS DATA CONTAINS 'JUMPER' OR 'NOTE', THE DATA ROW IS PLACED AT THE BOTTOM OF THE TERMINATION TICKET.
THIS CELL IS ALSO USED FOR THE TERMINATION NOTE. SEE HELP FOR WIRE NUMBER.

WIRE_NUMBER - IF THIS CELL IS '-NOTE-', THE DATA IN THE NUMBER/COLOR CELL IS PRINTED AS THE TERMINATION NOTE
ON THE TERMINATION TICKET AND NO OTHER DATA IN THIS ROW IS USED.
TO INSERT NOTE FOR MANY CABLES, USE THIS SHEET WITHOUT WIRE DATA AND USE SEQ NO='000'.


TO_TERM_PT - TO TERMINAL POINT NUMBER

OK

12.0 Logistical Checks

It is very important to check data before attempting to route cables. The reports in this section are designed to identify errors, inconsistencies and missing critical data.

ggh

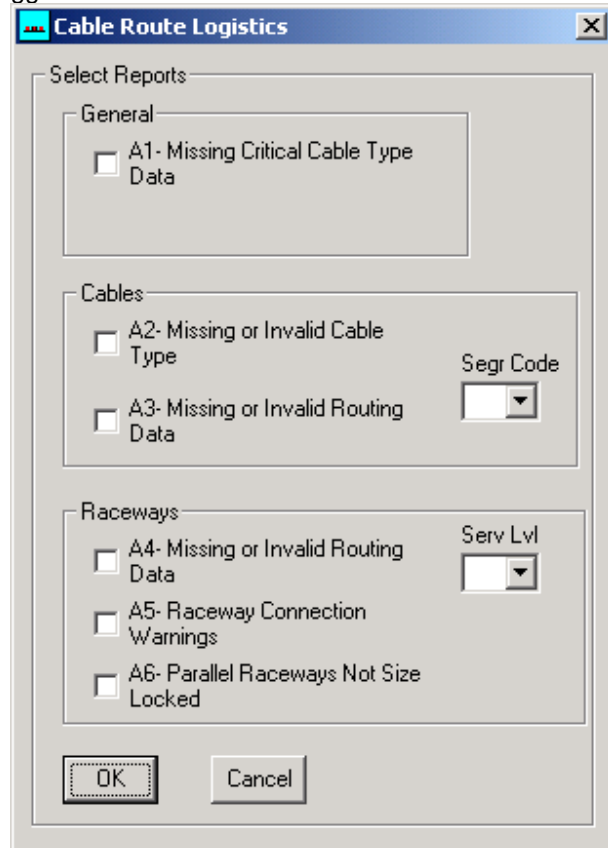

12.1 Report A1 - Missing Critical Cable Type

This report examines the CableType table for the following errors:

- Number of cable jackets not input
 - Number of conductors not input
 - Conductor Size not input or not defined in project data
 - Diameter not input
 - Override cable area not input And Ground Conductor='Y'
 - Permissible segregation codes not input
- This data is used in connection with Report A3 (see below).

12.2 Report A2 - Missing or Invalid Cable Type in Cable Data

This report examines the Cable Data table and finds cables that do not have cable type input or if the cable type is not input in the Cable Type table. In addition, this report, identifies cables that use cable types which have missing valid conductor size data. The report is used for a quick check for this crucial data.

12.3 Report A3 - Missing or Invalid Routing Data in Cable Data

This report will only check cables that are routed in raceway or have a route note. The following errors are reported:

- Cable type not input
- Segregation code not input
- From equipment not input
- To equipment not input
- Compatibility check of segregation code and cable type's permissible segregation codes
- Connecting from raceway (which is compatible with segregation code) not found
- Connecting to raceway (which is compatible with segregation code) not found

	CAB TYPE CODE	SEGR CODE	EQUIP FROM TAG	ASSOC FROM TAG	EQUIP TO TAG	ASSOC TO TAG	FROM RWAY	TO RWAY
1	1TSP#16	2	LATER		SCS -XA -970		RID9368, RID9370	NOT FND
2	1TSP#16	2	LATER		SCS -XA -971		RID9368, RID9370	NOT FND
3	1TSP#16	2	LATER		SCS -XA -973		RID9368, RID9370	NOT FND
4	1TSP#16	2	LATER		SCS -XA -974		RID9368, RID9370	NOT FND
5	2/C#14	3	LATER		SCS -XV -507		NOT FND	RC8001
6	2/C#14	3	LATER		SCS -XV -904A		NOT FND	RC8002
7	2/C#14	3	LATER		SCS -XV -904B		NOT FND	RC8003
8	2/C#14	3	LATER		SCS -XV -965		NOT FND	RC8026
9	2/C#14	3	LATER		SCS -XV -966		NOT FND	RC8021
10	1TSP#16	2	LATER		SCS -ZSC -507		RID9368, RID9370	NOT FND
11	1TSP#16	2	LATER		SCS -ZSC -943		RID9368, RID9370	NOT FND
12	1TSP#16	2	LATER		SCS -ZSO -507		RID9368, RID9370	NOT FND
13	1TSP#16	2	LATER		SCS -ZSO -943		RID9368, RID9370	NOT FND
14	3/C#14	ERR-2	50-PNL-RTU		50-VRP		RIA7005	RL941-2
15	COAX	1	51-EXC MON		51-VRP		NOT FND	UNDER FLR 51 1B, UNDER FLR 51 1C
16	COAX	1	52-EXC MON		52-VRP		NOT FND	UNDER FLR 52 1B, UNDER FLR 52 1C

12.4 Report A4 - Missing or Invalid Routing Data in Raceway data

- From point not input
- To point not input
- Where Offset >0, connecting tray not found
- From offset greater than tray length of connecting tray
- Where from point is a tray (or raceway), from offset is not input
- Service level not input
- Raceway type not input or not valid type
- Length not input
- Inconsistent raceway catalogue number and raceway type

	RACEWAY TAG	SERV LVL	RACEWAY TYPE	RAC CAT NMBR	LENGTH	FROM POINT	TO POINT	FROM OFFSET	NOTE
1	CT002-1	3	TRAY LADDER 6H	T12X6L	20	CT001-1	51-MP	ERR-	From Offset is blank
2	CT002-2	3	TRAY LADDER 6H	T12X6L	20	CT001-2	52-MP	ERR-	From Offset is blank
3	LT002-1	1	TRAY LADDER 6H	T12X6L	20	LT001-1	51-MP	ERR-	From Offset is blank
4	LT002-2	1	TRAY LADDER 6H	T12X6L	20	LT001-2	52-MP	ERR-	From Offset is blank
5	PT002-1	4	TRAY LADDER 6H	T12X6L	20	PT001-1	51-MP	ERR-	From Offset is blank
6	PT002-2	4	TRAY LADDER 6H	T12X6L	20	PT001-2	52-MP	ERR-	From Offset is blank
7	RC101-1	3	COND RGS	2" RGS	8	RC101-1	51-SP-JB2	ERR-	From Offset is blank
8	RC101-2	3	COND RGS	2" RGS	8	RC101-2	52-SP-JB2	ERR-	From Offset is blank
9	RC116-1	3	COND RGS	1-1/2" RGS	2	RC116-1	JBC116-1	ERR-	From Offset is blank
10	RC116-2	3	COND RGS	1-1/2" RGS	2	RC116-2	JBC116-2	ERR-	From Offset is blank
11	RC163-1	3	COND RGS	1-1/2" RGS	10	RC163-1	51-JOS-TB	ERR-	From Offset is blank
12	RC163-2	3	COND RGS	1-1/2" RGS	10	RC163-2	52-JOS-TB	ERR-	From Offset is blank
13	RC330-1	3	COND RGS	3/4" RGS	15	RC330-1	51-GEN-P2/RECP	ERR-	From Offset is blank
14	RC330-2	3	COND RGS	3/4" RGS	15	RC330-2	52-GEN-P2/RECP	ERR-	From Offset is blank
15	RC709-1	3	COND RGS	1" RGS	5	RC709-1	51-FGS-M	ERR-	From Offset is blank

12.5 Report A5 – Raceway Connection Warnings

This report identifies nodes that share the connections of trays (not conduits) that have different service levels. The service level is shown after the '\ ' next to the tray tag. In addition, it will indicate when the node type has an inconsistent amount of connected trays. Node types are indicated in the suffix of the node. Tray node types are E= End, T= Tee and X=Cross

A5- Raceway Connection Warnings....8/6/2002 1:12:03 PM			
File	Edit	Format	
ERR	NODE	TRAYS and SERVICE LEVELS	
1	ServLvl 50-DCS51B	TID162\2, TC362\3, TIA162\1	
2	ServLvl 50-DCS58B	TIA164\1, TC364\3, TID164\2	
3	ServLvl 51-CTEP	PT001-1\4, LT001-1\1, CT001-1\3	
4	ServLvl 52-CTEP	PT001-2\4, LT001-2\1, CT001-2\3	
5	ServLvl 51-MP	CT002-1\3, LT002-1\1, PT002-1\4	
6	ServLvl 52-MP	CT002-2\3, LT002-2\1, PT002-2\4	
7	Count TC302-E	TC306\3, TC302\3, TC301\3	
8	Count TC301-E	TC300\3, TC305\3, TC301\3	
9	Count TC303-E	TC302\3, TC303\3, TC304\3	
10	Count TC304-E	TC362\3, TC304\3, TC363\3	
11	Count TIA152-E	TIA152\1, TIA150\1	
12	Count TIA150-E	TIA153\1, TIA150\1	
13	Count TID101-E	TID105\2, TID101\2, TID100\2	
14	Count TID104-E	TID162\2, TID104\2, TID163\2	
15	Count TID105-E	TID164\2, TID105\2, TID165\2	
16	ServLvl 50-CPB21	TC332\3, TIA137\1, TID137\2	
17	ServLvl 50-GPR	TC345\3, TIA139\1, TID139\2	
18	ServLvl 50-CPB22	TC338\3, TIA138\1, TID138\2	
19	Count TID119-E	TID119\2, TID120\2	
20	Count TID120-E	TID120\2, TID141\2	
21	ServLvl 50-DCS57B	TC336\3, TIA135\1, TIA136\1, TID135\2, TID136\2	


12.6 Report A6 – Parallel Raceways Not Size Locked

When raceways have common from and to nodes, CableMatic will route in the first raceway (in alphanumeric order) that will not be overloaded. If the raceway is not 'Size Locked', then CableMatic assumes that it will not be overloaded. Therefore, some of the raceways will not be used if it was preceded alphabetically by a raceway that is not 'Size Locked'. You might want to consider having only the highest alphanumeric raceway as not 'Size Locked.'

A6- Parallel Raceways Not Size Locked....8/6/2002 1:22:21 PM			
File	Edit	Format	
ERR	PARALLEL RACEWAYS		
1	At least one parallel raceway not size locked	RP7007	RP7001
2	At least one parallel raceway not size locked	UNDER FLR 51 3E	UNDER FLR 51-4F
3	At least one parallel raceway not size locked	UNDER FLR 51 3F	UNDER FLR 51-4C
4	At least one parallel raceway not size locked	UNDER FLR 52 3E	UNDER FLR 52-4F
5	At least one parallel raceway not size locked	UNDER FLR 52 3F	UNDER FLR 52-4C
6	At least one parallel raceway not size locked	UNDER FLR 51 1A	UNDER FLR 51 L3
7	At least one parallel raceway not size locked	UNDER FLR 51 1B	UNDER FLOOR 51A
8	At least one parallel raceway not size locked	UNDER FLR 51 1C	UNDER FLOOR 51
9	At least one parallel raceway not size locked	UNDER FLR 52 1A	UNDER FLR 52 L3
10	At least one parallel raceway not size locked	UNDER FLR 52 1B	UNDER FLOOR 52A

13.0 Batch Routing

When the main menu command for Batch Routing is selected, a variety of options will be displayed. Only unlocked cables will be affected. If you choose to route by segregation code, you will be asked to supply a list of codes separated by commas (eg: 1,2,2S). If you want to route specific cables, you will be asked to supply the name of the text file containing the list and so you should prepare this file (use extension .txt) before you choose to use the list of cables. Before the routing process actually begins, CM+ will delete the cable routes for the cables that will be routed.

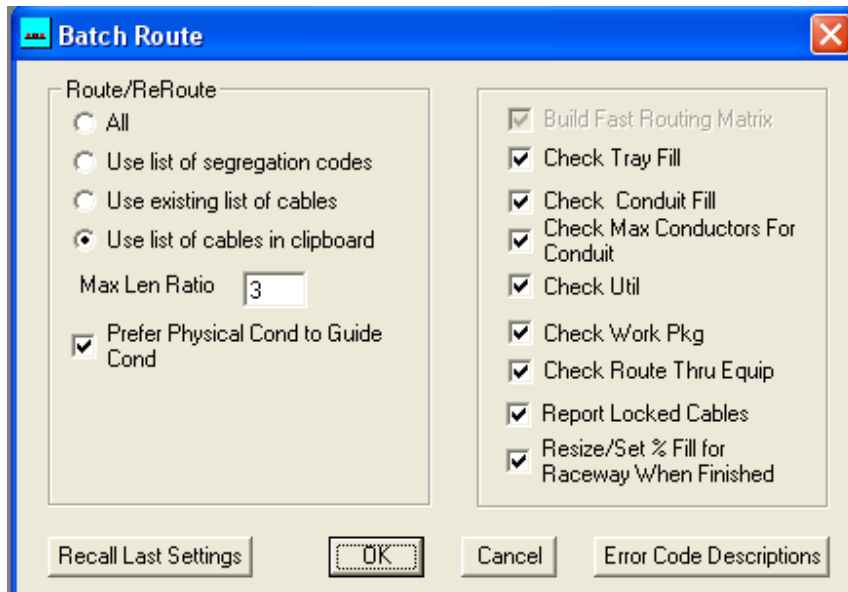

13.1 Build Fast Routing Matrix

The fast routing matrix is used to route cables very quickly. Usually it can be created very quickly but if you only have a few cables to route, you may turn off that option.

13.2 Check Tray and/or Conduit Fill

If you have routing problems that are caused by tray and/or conduit overloads, you might want to uncheck the option to avoid overfill. If you do this, you will probably want to get a report of overloaded trays and/or conduits before and after routing so that you can diagnose your problems. However, you also can diagnose problems by routing one cable at a time as explained in the next section.

13.3 Report Locked Cables

After batch routing, CM+ will report the results of all cables along with a comment explaining if the route has a problem such as no suitable entry or exit raceway is found. If *Report Locked Cables* is checked, CM+ will list the locked cables and check the continuity of their cable routes. If segregation codes are opted, only those cables having the inputted segregation codes are listed and checked. The route ratio is the length of the route (without reserve length) divided by the rectilinear distance between the from and to equipment. If the equipment locations are not stored, the value '0.0' appears.

Batch Routing Log									
File Edit Format									
	CAB TAG	SEGR	FROM	TO	FROM NODE	TO NODE	LEN	RATIO	ERROR
1	CM0001	5	50-TR004A	50-SWGR001	50-TR004A	50-SWGR001	125	0.0	
2	CM0002	5	50-TR004A	50-SWGR001	50-TR004A	50-SWGR001	125	0.0	
3	CM0003	5	50-TR004A	50-SWGR001	50-TR004A	50-SWGR001	125	0.0	
4	CM0004	5	50-TR004A	50-SWGR001	50-TR004A	50-SWGR001	125	0.0	
5	CM0005	5	50-TR004A	50-SWGR001	50-TR004A	50-SWGR001	125	0.0	
6	CM0006	5	50-TR004A	50-SWGR001	50-TR004A	50-SWGR001	125	0.0	
7	CM0007	5	50-TR004A	50-SWGR001	50-TR004A	50-SWGR001	125	0.0	
8	CM0008	5	50-TR004A	50-SWGR001	50-TR004A	50-SWGR001	125	0.0	
9	CM0009	5	50-SWGR001-10	50-MP009A	50-SWGR001-10	50-MP009A	520	0.0	
10	CM0010	5	50-SWGR001-3	50-MCCHV1	50-SWGR001-3	50-MCCHV1	605	0.0	
11	CM0011	5	50-SWGR001-3	50-MCCHV1	50-SWGR001-3	50-MCCHV1	605	0.0	
12	CM0012	5	50-SWGR001-3	50-MCCHV1	50-SWGR001-3	50-MCCHV1	605	0.0	
13	CM0013	5	50-SWGR001-3	50-MCCHV1	50-SWGR001-3	50-MCCHV1	605	0.0	
14	CM0014	5	50-SWGR001-4	50-TR002A	50-SWGR001-4	50-TR002A	520	0.0	
15	CM0015	5	50-SWGR001-4	50-TR002A	50-SWGR001-4	50-TR002A	520	0.0	
16	CM0021	5	50-TR004B	50-SWGR001	50-TR004B	50-SWGR001	52	0.0	
17	CM0022	5	50-TR004B	50-SWGR001	50-TR004B	50-SWGR001	52	0.0	
18	CM0023	5	50-TR004B	50-SWGR001	50-TR004B	50-SWGR001	52	0.0	
19	CM0024	5	50-TR004B	50-SWGR001	50-TR004B	50-SWGR001	52	0.0	
20	CM0025	5	50-TR004B	50-SWGR001	50-TR004B	50-SWGR001	52	0.0	
21	CM0026	5	50-TR004B	50-SWGR001	50-TR004B	50-SWGR001	52	0.0	
22	CM0027	5	50-TR004B	50-SWGR001	50-TR004B	50-SWGR001	52	0.0	

13.4 Resize/Set Fill for Raceway When Finished

CM+ will automatically size trays and conduits that are not 'size locked'. In order to perform this function quickly, CM+ resizes raceway when:

- 1) Requested by the user.
- 2) After Batch Routing (if option is checked).
- 3) When making a tray or conduit design report (as opted)
- 4) When making an issue.

Raceway fill is always maintained automatically during the routing process or when a cable is deleted. However, there may be conditions that affect raceway fill and sizing such as:

- 1) Cable type is changed for cable
- 2) Cable diameter or area is changed for a cable type
- 3) A conductor size is changed for a cable type
- 4) Reserve fill is changed
- 5) A tray or conduit type is changed
- 6) A tray or conduit size is changed
- 7) Cable routes are added or deleted by some external process not controlled by CM+

Warning - If this option is not checked the % fill of trays and conduits are not recalculated for display in the raceway data spreadsheet. You may choose to perform the *Resize/Set % Fill* function by selecting the Audits, Calcs and Tools main menu command and then selecting *Raceway – Regen Fill/Resize*.

14.0 Single Automatic and Manual Cable Routes

CM+ provides the ability to route one cable at a time so that it is easier to diagnose problems with data. Use the Cable Data Form for this purpose. You may also use that form change cable and equipment data.

14.1 Cable Data Form

The pull downs in the cable form work the same way as the pull downs in Wintab. For example, if you are starting with a blank form and you select a specific cable type and then press the pull down for cable tag, you will then be able to select a cable that use that cable type. If you don't select a cable and press the *Search* button, CM+ will retrieve all cables matching the cable type. You can then use the left and right arrows to browse the cables. Using this form you can add a new cable, change cable and equipment data and delete a cable.

CMP - Cable Routing

Cable Data

CAB TAG	10ADAD00CE001
TERM DWG1	0467AR01T
TERM DWG2	0467AR01T
CAB TYPE CODE	1TSP#16
SEGR CODE	1
EQUIP FROM TAG	50-GPR
ASSOC FROM TAG	
EQUIP TO TAG	50-CJ21
ASSOC TO TAG	50-CPB21
ROUTE NOTE	
CABLE NOTE	
WORK PKG	
PLANT SYS CODE	
START UP SYSTEM	STG-3-1
ROUTE LOCK	
DESIGN STATUS	
RT LEN	55.0
RT LEN OVERRIDE	
DESIGN NOTE	
UTIL CODE	
PULL CODE	
REV	0n
DEPT SOURCE	

1 of 4019 Clear All Search

Equipment

Design Vias Committed Vias

Equipment From

EQUIP TAG	50-GPR
EQUIP DESCR	STG PROTECTIVE RELAY PANEL
PLANT SYS CODE	
START UP SYSTEM	STG-3-1
IS SINGLE SYSTEM	Y
BLDG	43
AREA	
SUB AREA	
XLOC	
YLOC	
ZLOC	
DATA SOURCE	

Equipment To

EQUIP TAG	50-CJ21
EQUIP DESCR	ST CONTROL SYSTEM CAB
PLANT SYS CODE	
START UP SYSTEM	STG-3-1
IS SINGLE SYSTEM	
BLDG	43
AREA	
SUB AREA	
XLOC	
YLOC	
ZLOC	
DATA SOURCE	


Route Delete Cable Update Cable Update Equipment Exit

Use this tab to review and existing cable route. In some cases you will want to change an existing cable route using manual input of raceway tags. You can press the button *Copy Committed Vias to Design Vias* and then choose the Design Vias tab. Note in the example shown, the cable enter tray TIA110 in the middle of the tray and exits tray TIA108 10 feet after it enters that tray from tray TAI110. CM+ maintains the tray fill at all points along the tray.

34

14.3 Design Vias Tab

Use this tab to input an entire route or partial route. Edit functions are provided using the right click of the mouse.

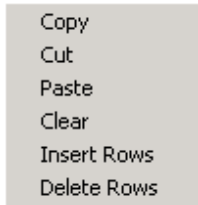

Input the raceways in the order that the cable will route. If a raceway or group of raceways are not included, CM+ will attempt to find the missing raceways. After editing the route, press *Update Design Vias* and then the *Route* button. When using the Design Vias data you must select that option in the routing form (see next paragraph). In general, CM+ ignore the length you input in the Design Via data. However, if the raceway is not found, that length will be used to compute the route length.

CMP - Cable Routing

Cable Data

CAB TAG	TEST
TERM DWG1	0467AR01T
TERM DWG2	0467AR01T
CAB TYPE CODE	1TSP#16
SEGR CODE	1
EQUIP FROM TAG	50-GPR
ASSOC FROM TAG	
EQUIP TO TAG	50-CJ21
ASSOC TO TAG	50-CPB21
ROUTE NOTE	
CABLE NOTE	
WORK PKG	
PLANT SYS CODE	
START UP SYSTEM	STG-3-1
ROUTE LOCK	Y
DESIGN STATUS	
RT LEN	
RT LEN OVERRIDE	
DESIGN NOTE	
UTIL CODE	
PULL CODE	
REV	0N
DEPT SOURCE	

1 of 1 Clear All Search

Equipment Design Vias Committed Vias


Raceway Tag	Length
TIA139	
TIA110	
TIA108	
TIA1121	
TIA137	

Delete Design Vias Update Design Vias Help

Route Delete Cable Update Cable Update Equipment Exit

14.4 Routing With Design Vias


You do not have to enter all the raceways in the route, however please enter the raceways in the correct routing sequence. CM+ will attempt to insert any missing raceways. Errors such as incompatible service level or raceway not found will be displayed and you will be given an option to commit the cable as is. It is possible that if make an error in sequencing the raceways, CM+ may fix it.

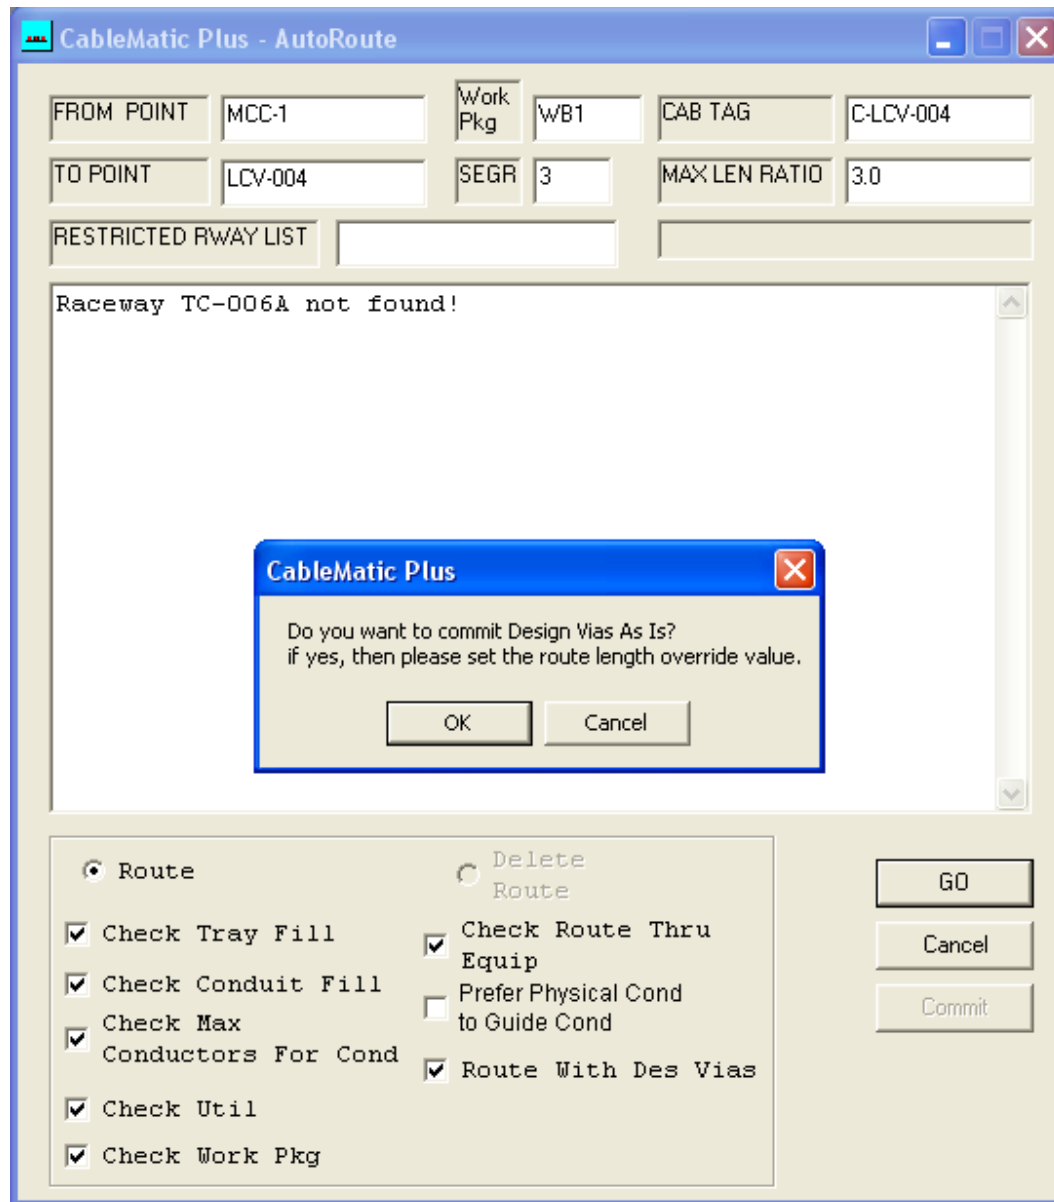

14.5 Routing Options

Here is an example where a cable route exists for a cable. Note that the Route option is disabled. To enable the route option you must opt for *Delete Route* and then press GO. When the cable is routed, the Commit button will be enabled. Pressing that button will save the route. When you commit a cable

route, CM+ will offer to lock the route. The check options are self explanatory and provide for diagnostic capability. For example, if you uncheck *Tray Fill* a route may be found but VM+ will indicate what raceways rays are overloaded. Utilization and work package rule checking can also be disabled. The Allocate Duct Bank conduits option is used when you want CM+ to route through conduits in a Duct Bank. If this is not opted, the CM+ will route through the Duct Bank without assigning conduits.

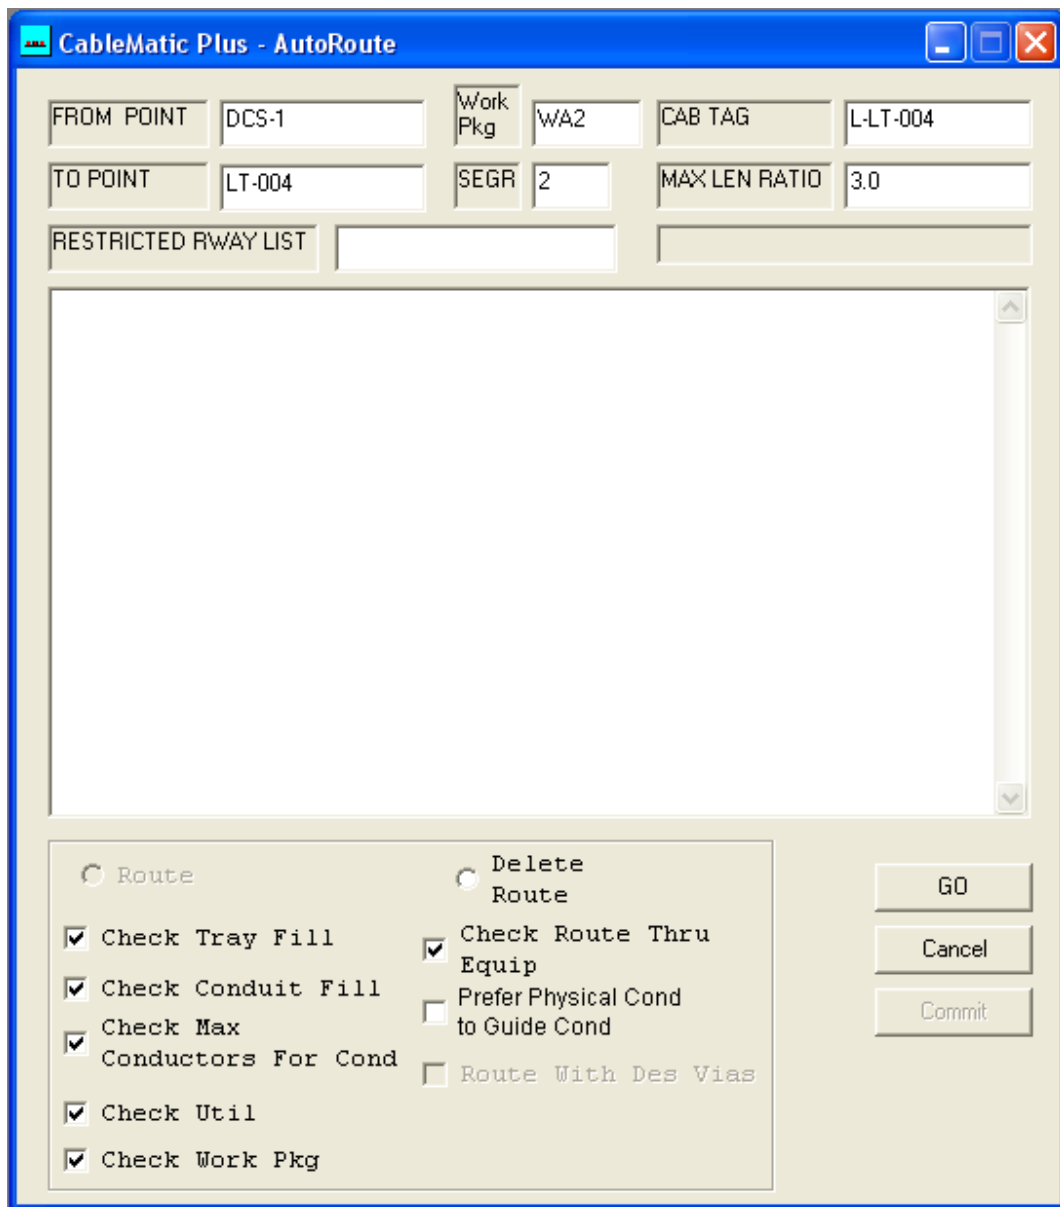

CableMatic Plus - AutoRoute

FROM POINT: DCS-1 Work Pkg: WA2 CAB TAG: L-LT-004

TO POINT: LT-004 SEGR: 2 MAX LEN RATIO: 3.0

RESTRICTED RWAY LIST:

☐ Route ☐ Delete Route

☒ Check Tray Fill ☒ Check Route Thru Equip

☒ Check Conduit Fill ☐ Prefer Physical Cond to Guide Cond


☒ Check Max Conductors For Cond ☐ Route With Des Vias

☒ Check Util

☒ Check Work Pkg

GO Cancel Commit

15.0 Audits, Calcs and Tools

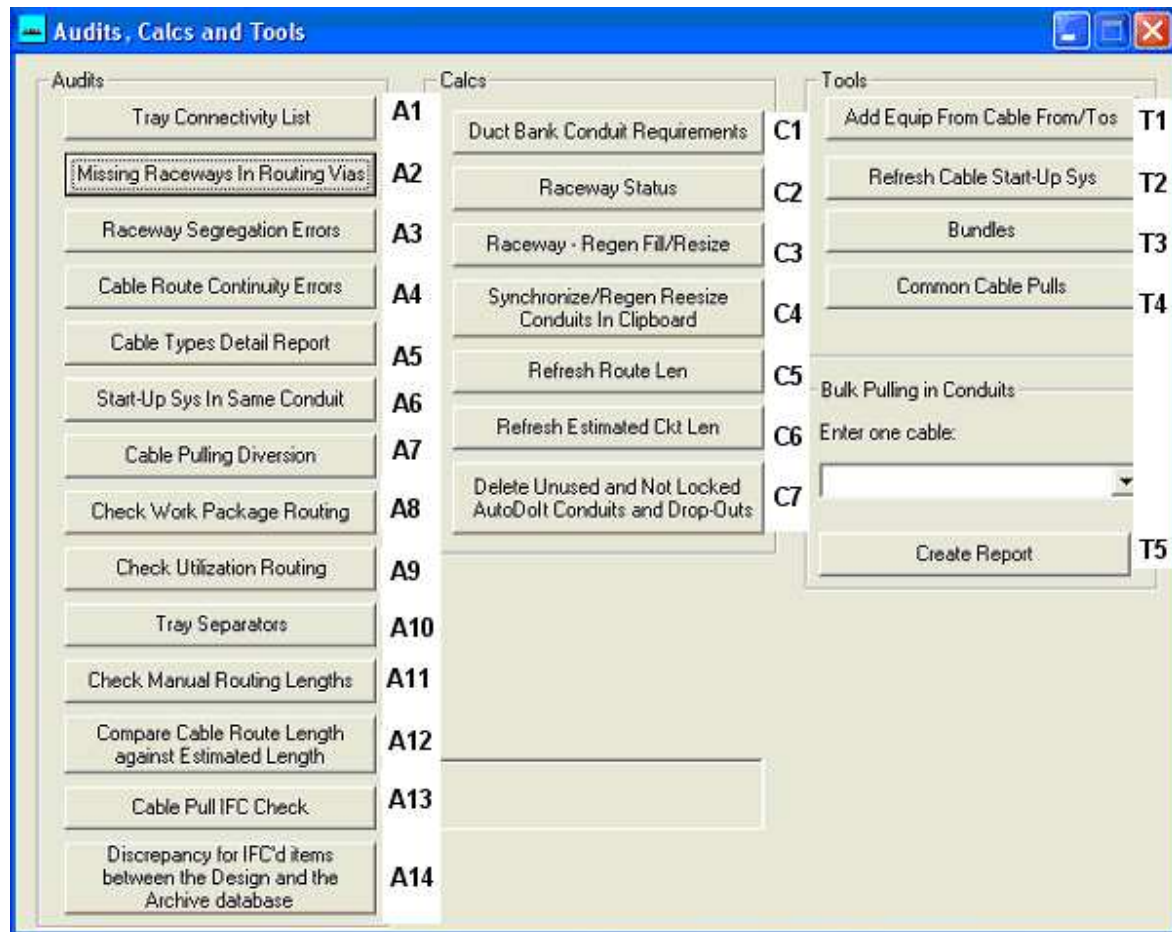

Audits are reports (usually in spreadsheet format) that report problems such as:

- A1) Creates a Tray End Connectivity List from Tray data in ACRS_RACEWAY_DATA table
- A2) A cable route uses a raceway that is not in the raceway data table
- A3) Cables segregation codes that are incompatible with the raceways that the cables are in
- A4) Cable routes that do not link between raceways (an apparent gap)
- A5) Reports all data for cable types plus includes the amt of cables using the cable type.
- A6) Displays problem when cables of different start-up systems are routed in the same conduit.
- A7) Reports cables that are routed in the same raceways at the start and end of the routes but diverge in the middle of the route.
- A8) Checks errors in cables routed in conduits with the wrong Work Package
- A9) Checks errors in cables routed in conduits with the wrong Utilization Code
- A10) Reports errors where the sum of tray separator widths exceed the tray width
- A11) This function reports raceways and cables where the raceways in manual cable routes have lengths (in Parenthesis) that are longer than the raceway length input to the raceway data table.
- A12) Report optionally all or only cables with estimated length smaller than the route length.
- A13) This function reports on cables that are IFC where the route is missing or where the route uses conduits that are not IFC.
- A14) This function compares IFC'd cables and conduits in the design database to the archive table and creates a report of discrepancies in their data. Please read Discrepancy Report for IFC Components.pdf for more detail.

C1) Calculates the area of cable in Guide Conduits

C2) Lists cables contained and fill for a raceway. Fill can be obtained at any point on the raceway

C3) Resizes unlocked raceways and calculates % fill. Use this to refresh the data for spreadsheet queries. This is handled automatically when batch routing and making an issue.

C4) Self explanatory.

C5) This will correct the cable route lengths that may be incorrect based upon the changes in raceway length.

This is automatic when an issue is made

C6) This function will refresh the EST_LEN field for each cable where the EST_LEN was not input by a user and the From/To (or ASSOC Equip) locations are available. Lengths are calculated as 1.3 times the Delta XYZ length between cable ends plus the Additional Len in Project Data.

C7) Deletes AutoDoIT unused conduits and dropouts

Tools provide functions that automate the preparation of data.

T1) Transfers equipment tags from cable from/to that are not in the equipment table.

T2) Sets start-up system for cables (which are blank) to the system of it's connecting equipment. Please read the rules procedure indicated below.

T3) This function is used only in PANEL model types. It calculates pull code.

T4) This function lists cables that are common pulls for the raceways that you input in the list.

Warning - cables listed in your output may be entering or exiting the tray at any point of the tray run. If this is an issue, please use TrayMatic Cool Tools to show all the cables at the start the pull and then selecting the cables at the end of the pull.

T5) Please refer to the CM+ BuilderGuide.pdf, paragraph 5.6.

16.0 Reporting

Select one of the report types and different constraints, options and sorts will be presented. The New, Revised and Deleted reports (when checked) are provided as additional lists to the report that is requested. The Sort by feature provides choices for each main field in the report. The default sort is by the component tag and if that is the sort you want, the other sort choices will not be available. When you make your selections, press 'Create Report' and you will be asked for a description. Enter or select descriptions. Descriptions for each type of report are saved in the database for your convenience. You may also delete a saved description. Reports for Cable, Trays, Conduits and Equipment will have the option to restrict the report by a list of tags. In addition, the cable report has the option to restrict by a list of connecting equipment tags.

16.1 Tray Report Request Form

The screenshot shows the 'CM+ Reports' dialog box. The 'Report Type' section on the left has radio buttons for 'Tray Fill Report' (selected), 'Conduit Report', 'Cable Report', 'Equipment Report', 'Material Report', 'PanelMatic Bundles Report', and 'Drawing List Report'. Below these is a button labeled 'Pull and Terminations Changed'. The 'Constraints' section on the left has dropdown menus for 'Serv Level', 'Work Pkg', 'Revision', 'From Dwg', and 'To Dwg'. A text box at the bottom left states: 'SQL search characters like * and ? are permitted, except for end date.' The 'Sort by' section on the right has a dropdown menu set to 'PLAN DWG NMER FROM' and three empty 'Then by' dropdown menus. The 'Report Content Option' section on the right has radio buttons for 'D0 - Standard' (selected), 'D1 - Cables Contained and Connecting Raceways', 'D2 - Cables Contained', and 'D3 - Connecting Raceways'. Below these are checkboxes for 'Over Fill', 'Omit Serv level', 'Omit Work Pkg', 'Omit Length', 'Omit Size Lock Mark' (checked), 'Omit Design Status', and 'New, Revised and Deleted Trays'. At the bottom right are buttons for 'Highlight What Changed', 'Create Report', 'Exit', and 'Restrict By Tag List'. An 'Enter report description' sub-dialog box is open in the foreground, showing a list of descriptions: 'Cables On Hold' and 'Instrument Cables Missing Termination Info'. It has 'OK', 'Cancel', and 'Delete Selection' buttons.


16.2 Conduit Report Request Form

The image shows a software window titled "CM+ Reports" with a blue title bar and standard Windows window controls. The window is divided into several sections:

- Report Type:** A group box containing seven radio buttons: "Tray Fill Report", "Conduit Report" (selected), "Cable Report", "Equipment Report", "Material Report", "PanelMatic Bundles Report", and "Drawing List Report". Below these is a button labeled "Pull and Terminations Changed".
- Constraints:** A group box containing five dropdown menus: "Serv Level", "Work Pkg", "Revision", "From Dwg", and "To Dwg".
- Sort by:** A group box containing a "Sort by" dropdown menu (set to "SERV_LVL") and six "Then by" dropdown menus, the first of which is set to "WORK_PKG".
- Report Content Option:** A group box containing three radio buttons: "D10 - Standard" (selected), "D12 - Cables Contained", and "D13 - Conduits Without Cables". Below these is a list of checkboxes: "Over Fill", "Omit Serv level", "Omit Work Pkg", "Omit Length", "Omit Size Lock Mark" (checked), "Omit Air Ways" (checked), "Omit Drop Outs", "Max Conductors Exceeded", "Omit Design Status", and "New, Revised and Deleted Conduits".
- Buttons:** At the bottom right, there are three buttons: "Exit", "Create Report", and "Restrict By Tag List".
- Text Box:** At the bottom left, a text box contains the text: "SQL search characters like * and ? are permitted, except for end date."

16.3 Cable Report Request Form


This cable report may be a cable schedule with the cable route or a termination report which lists the termination details for the cable.

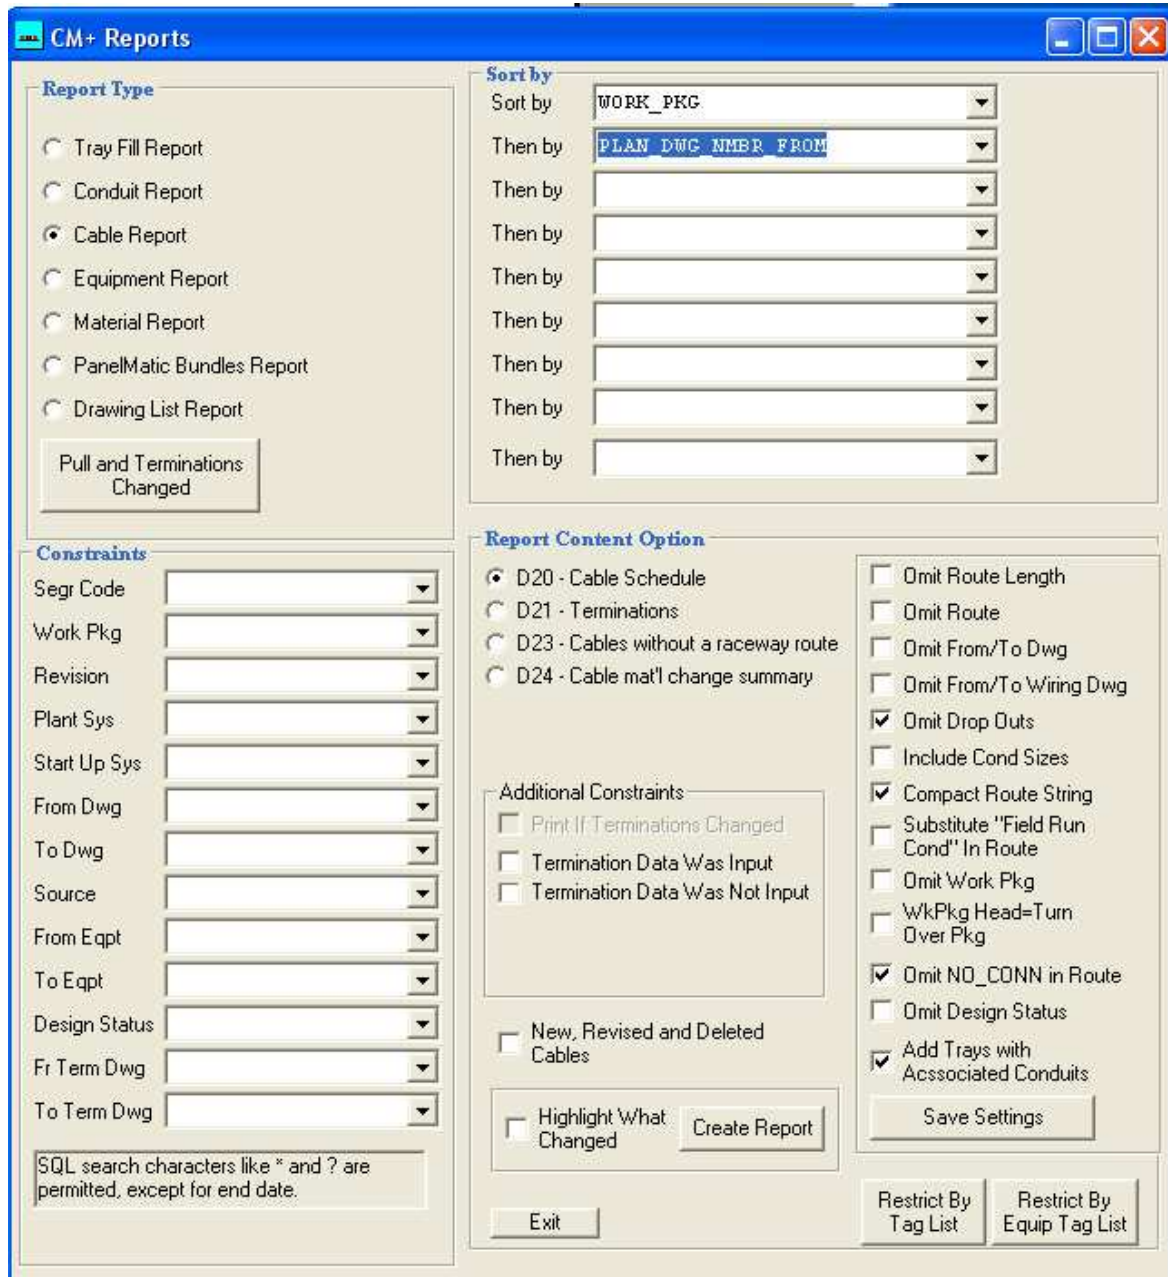

The image shows a software window titled "CM+ Reports". It contains several sections for configuring a report:

- Report Type:** A list of radio buttons for selecting the report type: Tray Fill Report, Conduit Report, Cable Report (selected), Equipment Report, Material Report, PanelMatic Bundles Report, and Drawing List Report. Below this is a button labeled "Pull and Terminations Changed".
- Sort by:** A series of dropdown menus for sorting the report. The first is set to "WORK_PKG", and the second is set to "PLAN DWG NMBR FROM". There are seven more empty dropdown menus.
- Constraints:** A section with multiple dropdown menus for filtering results: Segr Code, Work Pkg, Revision, Plant Sys, Start Up Sys, From Dwg, To Dwg, Source, From Eqpt, To Eqpt, Design Status, Fr Term Dwg, and To Term Dwg. Below these is a text box with the note: "SQL search characters like * and ? are permitted, except for end date."
- Report Content Option:** A section with radio buttons for selecting the report content: D20 - Cable Schedule (selected), D21 - Terminations, D23 - Cables without a raceway route, and D24 - Cable mat'l change summary. Below this is a box for "Additional Constraints" with checkboxes for "Print If Terminations Changed", "Termination Data Was Input", and "Termination Data Was Not Input". There are also checkboxes for "New, Revised and Deleted Cables" and "Highlight What Changed". A "Create Report" button is located to the right of the "Highlight What Changed" checkbox.
- Report Content Option (Right):** A list of checkboxes for additional report options: Omit Route Length, Omit Route, Omit From/To Dwg, Omit From/To Wiring Dwg, Omit Drop Outs (checked), Include Cond Sizes, Compact Route String (checked), Substitute "Field Run Cond" In Route, Omit Work Pkg, WkPkg Head=Turn Over Pkg, Omit NO_CONN in Route (checked), Omit Design Status, and Add Trays with Associated Conduits (checked). A "Save Settings" button is located below these options.
- Buttons:** At the bottom, there are buttons for "Exit", "Restrict By Tag List", and "Restrict By Equip Tag List".

16.4 Equipment Report Request Form

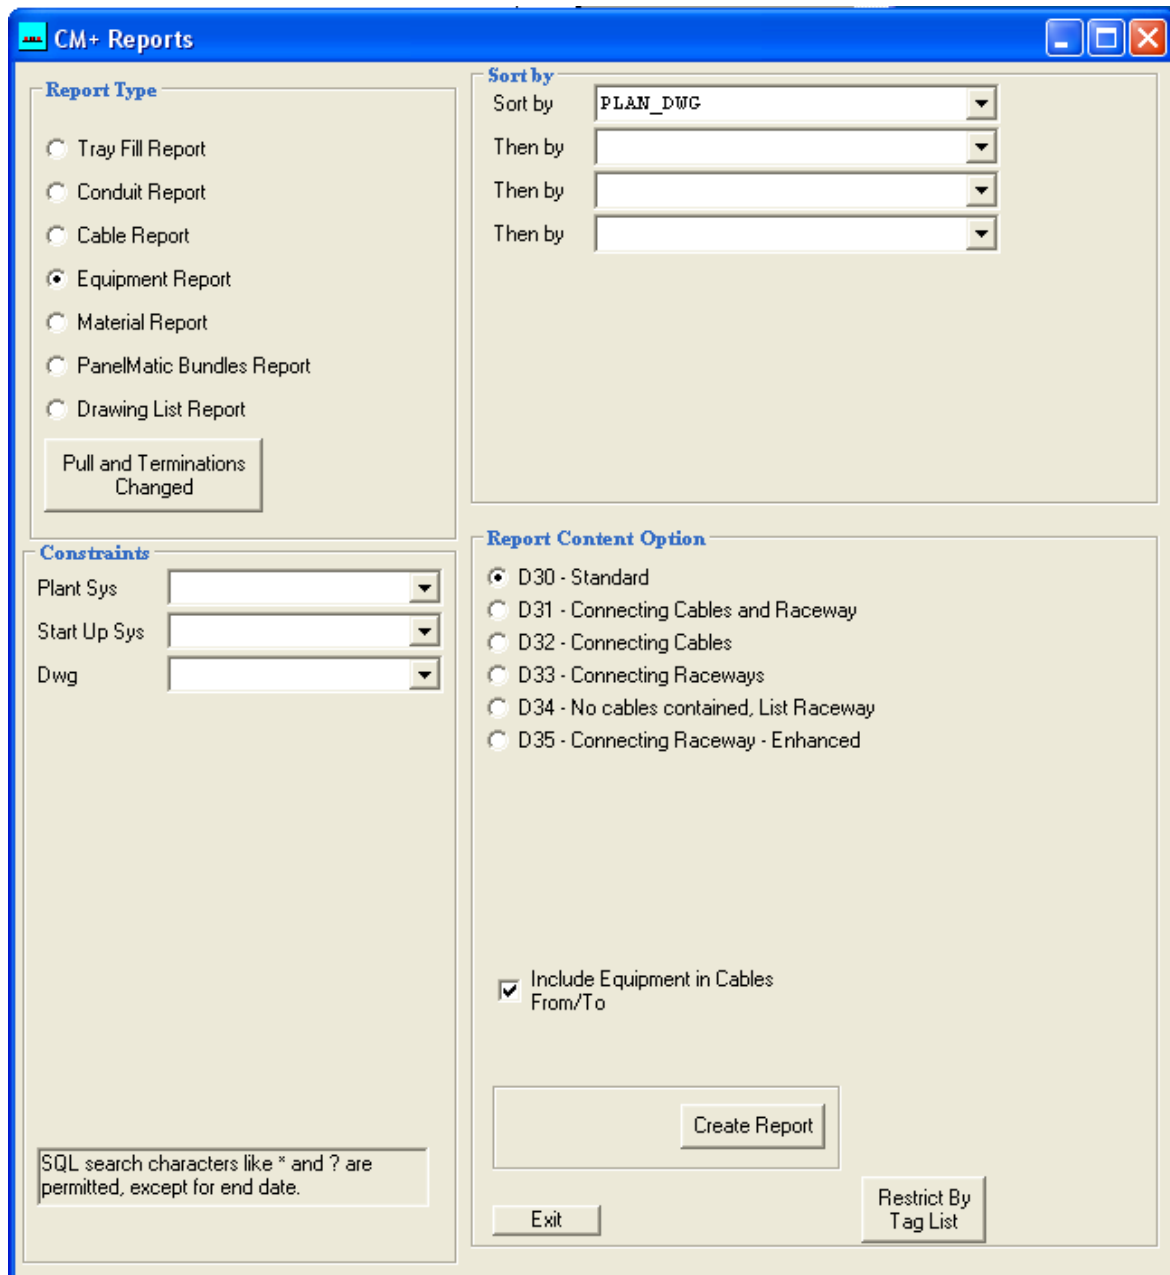

The image shows a software window titled "CM+ Reports" with a blue title bar and standard Windows window controls. The window is divided into several sections for configuring a report.

Report Type

- ☐ Tray Fill Report
- ☐ Conduit Report
- ☐ Cable Report
- ☒ Equipment Report
- ☐ Material Report
- ☐ PanelMatic Bundles Report
- ☐ Drawing List Report

Constraints

Plant Sys

Start Up Sys

Dwg

SQL search characters like * and ? are permitted, except for end date.

Sort by

Sort by

Then by

Then by

Then by

Report Content Option

- ☒ D30 - Standard
- ☐ D31 - Connecting Cables and Raceway
- ☐ D32 - Connecting Cables
- ☐ D33 - Connecting Raceways
- ☐ D34 - No cables contained, List Raceway
- ☐ D35 - Connecting Raceway - Enhanced

☒ Include Equipment in Cables From/To

16.5 Material Report Request Form

Cable conduit and tray bill of material reports list quantities for the cable, conduit and tray types and sizes used. The tray material report (D43) is a basic report displaying tray length by tray type. The Tray Len and Fittings report (D44) will offer 'DbQuery' type of filter and will include fittings. This report uses data that is created by TrayMatic and this data will be created in the TrayMatic database when required. In the event that data has changed by TrayMatic, there will be a delay before the report is created while TrayMatic is automatically called upon to generate the data. The process of creating data also includes creating information in the Commodity Mapping table in TrayMatic. Use TrayMatic to add project commodity codes and revise descriptions.

CM+ Reports

Report Type

- ☐ Tray Fill Report
- ☐ Conduit Report
- ☐ Cable Report
- ☐ Equipment Report
- ☒ Material Report
- ☐ PanelMatic Bundles Report
- ☐ Drawing List Report

Pull and Terminations Changed

Sort by

Constraints

Report Content Option

- ☒ D41 - Cable
- ☐ D42 - Conduit
- ☐ D43 - Tray Len
- ☐ D44 - Tray Len and Fittings


- ☐ Omit Diameter
- ☐ Omit Grounds
- ☐ Omit Length
- ☐ Omit MBR
- ☐ Omit Note
- ☐ Omit Spec
- ☐ Report by Work Pkg

Create Report

Exit

SQL search characters like * and ? are permitted, except for end date.

17.0 Advanced Tools

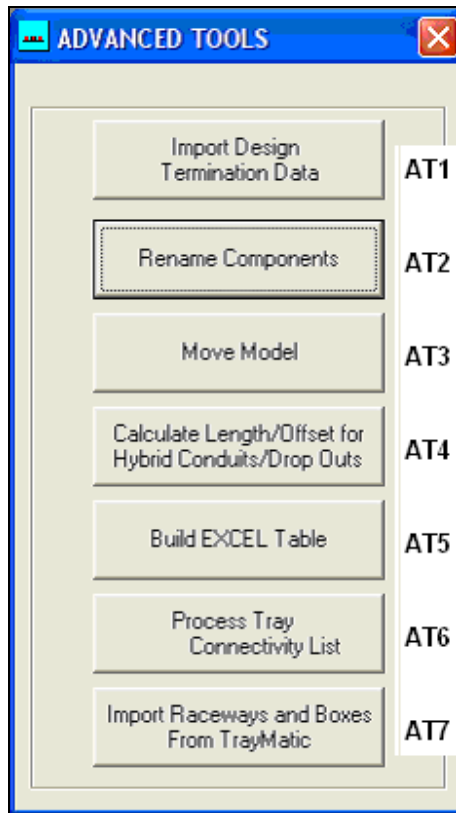

AT1) Cable termination data can be imported from a project's CM+ database

AT2) Uses the RENAMING table to rename components (trays, cables, conduits, equipment) . Please remove data from the Renaming table after it the process is completed.

AT3) Moves the entire model to a location specified by the user.

AT4) For each conduit or drop out that has 'CALC' in either the LENGTH or FROM_OFFSET field, this function will attempt to compute the value(s). You may input the tray tag in the FROM column or enter 'CALC' to find the closest tray (within 200FT (approx 66 Meters) with the same service level as the conduit/drop out.

AT5) Used to create cable, equipment and raceway tables for exporting to Excel. These spreadsheets can be sent to contractors and clients in their required formats.

AT6) Reads the TRAY_END_CONNECTIVITY table and based on the data sets the From/To Point for trays in the ACRS_RACEWAY_DATA table. It checks the consistency of the data and if errors are reported, the data will not be committed.

AT7) Imports the Raceway Data from TM. Performs data consistency checks and aborts when data not consistent (tray names, service levels, etc.). When successful, assigns trays node names.

18.0 Interfaces For 3D

TrayMatic is a GSN Technology software product that supports the design of all cable raceway in a 3D format. The benefits of using TrayMatic includes savings in time in preparing drawings and saving in time in preparing raceway data for CableMatic.